



 
SYSTIMAX 360™ Modular Distribution Panel Instructions

General


The **SYSTIMAX 360™** modular distribution panels (DPs) feature MPO aligned-key adapters and are designed for easy interchangeability with **InstaPATCH 360** modules and **360 G2** cartridges. The panels are installed in a MOD panel or MOD shelf where array connectivity to equipment is required. The panels are available in a 2MPO, 4MPO, 6MPO, and 8MPO adapter capacity or as a blank filler panel.

Ordering information is listed below:


Material ID	Product Number	Description
760107490	360DP-2MPO	Distribution panel, 2 MPO capacity
760107508	360DP-4MPO	Distribution panel, 4 MPO capacity
760107516	360DP-6MPO	Distribution panel, 6 MPO capacity
760107524	360DP-8MPO	Distribution panel, 8 MPO capacity
760109462	360G2-MOD-BLANK-4PK	360G2 blank modular panel (4 panels)

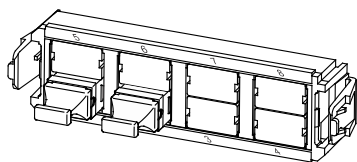


360DP-2MPO

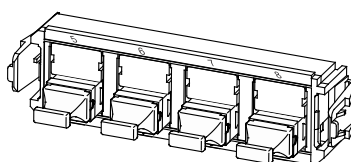 


360DP-4MPO

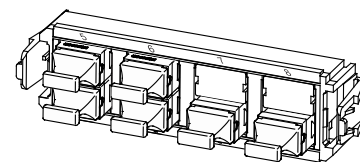

360DP-6MPO

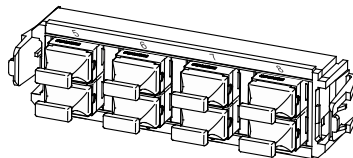 

360DP-8MPO

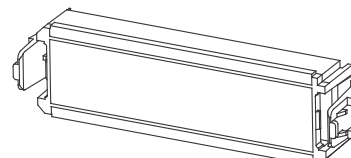 

360G2-MOD-BLANK

How to Contact Us

- To find out more about **CommScope®** products, visit us on the web at <http://www.commscope.com/>
- For technical assistance:
 - Within the United States, contact your local account representative or technical support at 1-800-344-0223. Outside the United States, contact your local account representative or Authorized Business Partner.
 - Within the United States, report any missing/damaged parts or any other issues to **CommScope** Customer Claims at 1-866-539-2795. Outside the United States, contact your local account representative or Authorized Business Partner.

Tools Required

- Flat blade screwdriver


Parts List

Verify parts against parts list below:

Quantity	Description
1	Panel
1	Installation instruction sheet
1	MPO cleaning instruction sheet

Install Modular Distribution Panel(s)

Note: All MPO to MPO connections **must** include a pinned male ferrule connector and an unpinned female ferrule connector. Any attempt to connect male-to-male or female-to-female will result in damage to the connectors.

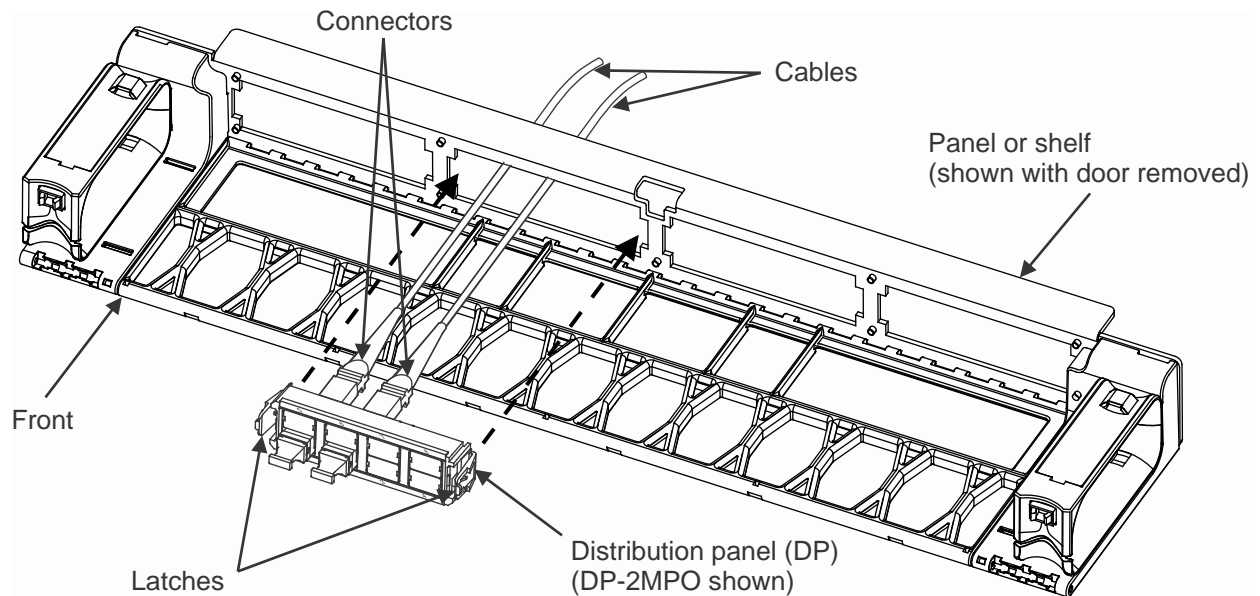

1. Feed cable(s) with connector(s) through opening in panel or shelf.
2. Insert connector into rear of distribution panel (DP), taking care to orient the connector with the corresponding alignment key feature in the adapter.
3. Insert DP into opening in panel or shelf until latches are engaged and DP is secure.
4. If desired, loosely secure cable to rear of panel or shelf.