



## VisiPatch® 360 Panel Kit Instructions

### General

The **SYSTIMAX® VisiPatch®** VP360 panel kit includes the components to mount two **VisiPatch 360** wiring blocks into an industry standard 19-inch (483mm) wide rack.

This supplements instruction sheet 860387018, **VisiPatch 360** Wall Mounted Panel System. Refer to that document for detailed component installation and cabling.

Ordering information is listed below:

Material ID	Part No.	Description
760074278	VP360-19PNL-KT	<b>VisiPatch® 360</b> 19-inch (483mm) 1U panel kit

### How to Contact Us

- To find out more about **CommScope®** products, visit us on the web at <http://www.commscope.com/>
- For technical assistance:
  - Within the United States, contact your local account representative or technical support at 1-800-344-0223. Outside the United States, contact your local account representative or Authorized Business Partner.
  - Within the United States, report any missing/damaged parts or any other issues to CommScope Customer Claims at 1-866-539-2795. Outside the United States, contact your local account representative or Authorized Business Partner.

### Tools Required

- Phillips head screwdriver
- 788H1 tool (108062043) with VP360-788-HEAD (760060350) ordered separately
- D914 tool (407484971) with VP360-914-BIT-E (760142463) ordered separately


### Parts List

Verify parts against the parts list below:

Quantity	Description
1	Mounting panel
2	Wiring blocks
2	Wiring block covers
16	Connecting blocks
2	Label holders
1	Label sheet
4	Mounting screws, 12-24 x .5
1	Instruction sheet


This product is covered by one or more of the following U.S. patents or their foreign equivalents: 6,106,329, 5,915,989, 5,911,594, 6,403,885, 6,379,194, 6,302,699, 6,276,972, 6,118,075, 6,242,698, 5,718,604, 6,302,728, 6,284,980, 6,227,886, 6,159,020, 5,915,992, 7,223,115.

## Step 1 – Install Mounting Panel

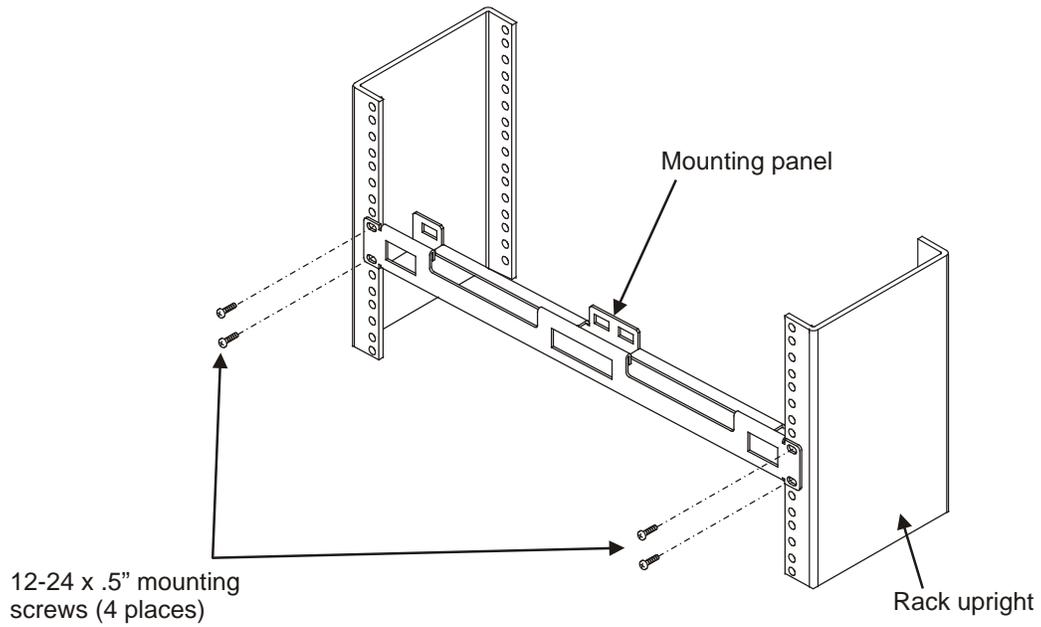

1. Orient mounting panel as shown above and install on rack using the four 12-24 x .5" screws provided.

## Step 2 – Install Wiring Blocks

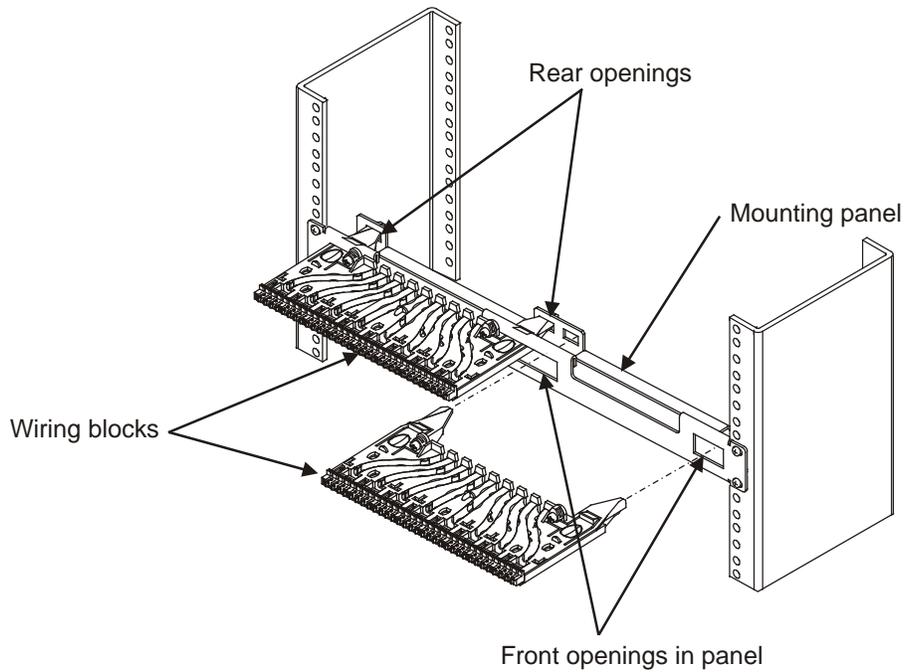


1. Insert wiring blocks into front and rear openings in mounting panel until an audible click is heard.

### Step 3 – Seat and Terminate Conductors in Wiring Blocks

**Note:** Wiring is not covered in this instruction sheet. See the instruction sheet 860387018, **VisiPatch 360** Wall Mounted Panel System, for termination instructions.

### Step 4 – Install Wiring Block Cover, Label Holders, and Labels

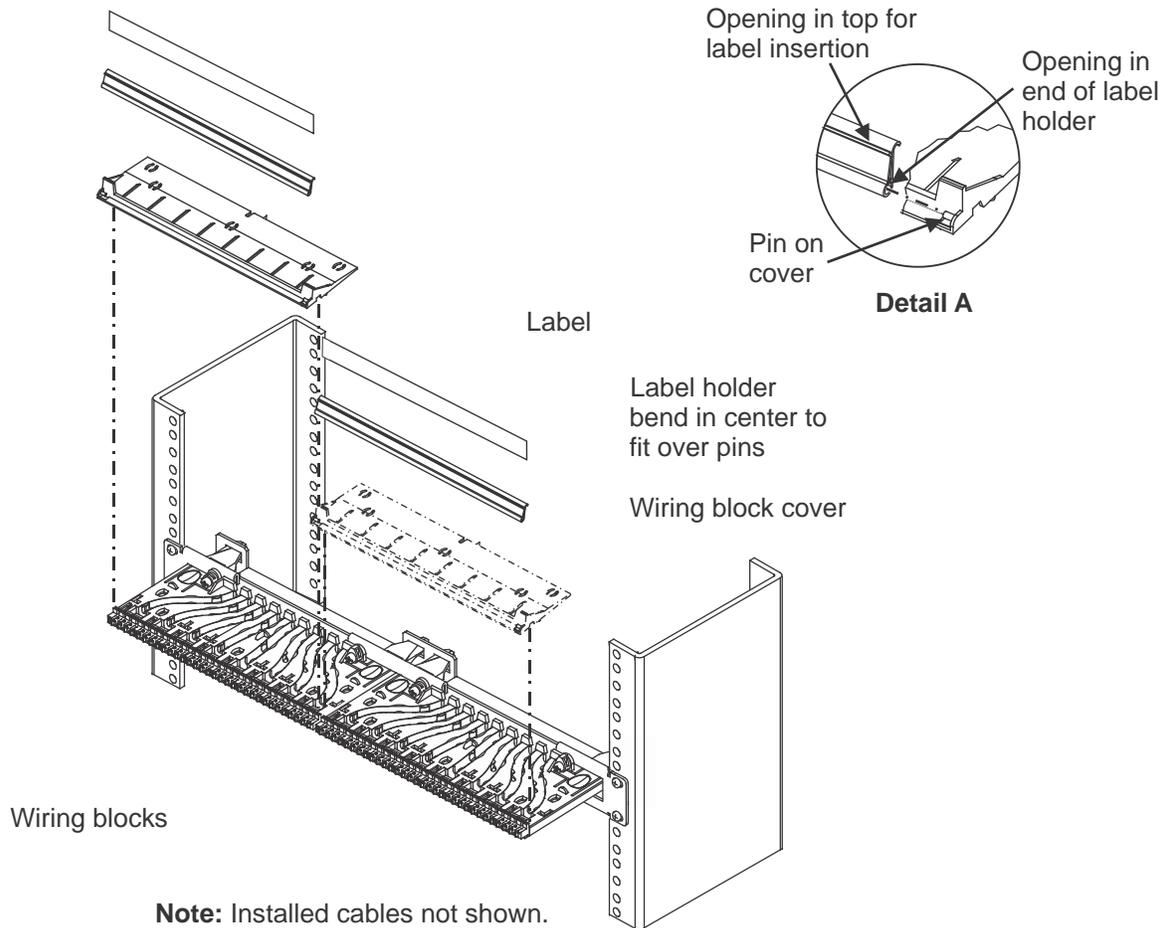

1. Position cover as shown above and push down onto wiring block until latches in cover engage in wiring block.
2. Position one end of label holder as shown and in Detail A, then flex (bend) holder in the middle until the opening in the other end of label holder can be inserted over opposite pin provided in wire block cover.
3. Release label holder.
4. Tear off one label from sheet provided, designate connection as desired, and slide label into opening provided in top of label holder.