


Fiber Distribution Hub

FDH 3000 **864 Termination Cabinet**

User Manual

ADCP-96-088
Issue 3, July 2016

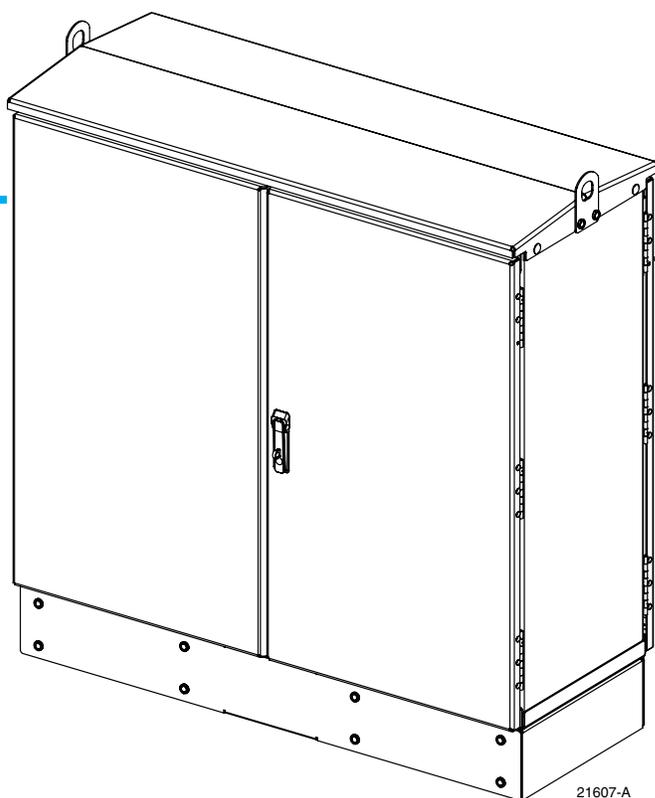

COPYRIGHT

© 2016, CommScope Inc.
All Rights Reserved

REVISION HISTORY

ISSUE	DATE	REASON FOR CHANGE
1	3/2007	Original.
2	6/2013	Updated to TE format.
3	July 2016	Updated to CommScope format.

TRADEMARK INFORMATION

CommScope, CommScope(logo), and NG4access are registered trademarks of CommScope, Inc.

Telcordia is a registered trademark of Telcordia Technologies, Inc.

GORE is a registered trademark of W. L. Gore & Associates, Inc.

DISCLAIMER OF LIABILITY

Contents herein are current as of the date of publication. CommScope reserves the right to change the contents without prior notice. **In no event shall CommScope Inc. be liable for any damages resulting from loss of data, loss of use, or loss of profits and CommScope Inc. further disclaims any and all liability for indirect, incidental, special, consequential or other similar damages. This disclaimer of liability applies to all products, publications and services during and after the warranty period.**

This publication may be verified at any time by contacting CommScope's Technical Assistance Center at 1.800.830.5056, or by e-mail to TAC.Americas@commscope.com.



TABLE OF CONTENTS

Content	Page
About This Manual	v
Related Publications	v
Admonishments	v
General Safety Precautions	v
Standards Certification	vi
List of Acronyms and Abbreviations	vi
1 DESCRIPTION	1
1.1 FDH 3000 864 Termination Cabinet	1
2 BEFORE STARTING THE INSTALLATION	5
2.1 Installation Overview	5
2.2 Unpacking and Inspection	5
2.3 Cabinet Installation Hardware	6
2.4 OSP Cable and Cabinet Grounding Cables	6
2.5 Tools and Materials Required for Installation	6
2.6 Cabinet Mounting	7
3 MOUNTING THE CABINET ON A MOUNTING SLEEVE	8
3.1 Installation Recommendations	8
3.2 Excavation	8
3.3 Placement of the FMS	9
3.4 Cable Conduit Installation	10
3.5 Grounding System Installation	10
3.6 Back Fill	10
3.7 Mounting the Cabinet on the FMS	10
3.8 Grounding Wire Connection To Cabinet	13
4 MOUNTING THE CABINET ON A CONCRETE PAD	15
4.1 Installation Recommendations	15
4.2 Base Construction and Conduit Installation	15
4.3 Concrete Pad Construction	17
4.4 Grounding System Installation	18
4.5 Mounting the Cabinet on the Concrete Pad	18
4.6 Grounding Wire Connection To Cabinet	22
5 FEEDER AND DISTRIBUTION CABLE CONFIGURATION INFORMATION	24
5.1 OSP Feeder Cable Configuration	24
5.2 OSP Distribution Cable Configuration	25
6 PLUG AND PLAY SPLITTER MODULE INSTALLATION	26
7 DISTRIBUTION PANEL INSTALLATION	29
8 ROUTING AND CONNECTING THE SPLITTER OUTPUT FIBERS	37
8.1 Storing The Splitter Output Fibers	37
8.2 Enabling Service To a Subscriber	38
9 PASS-THROUGH ROUTING PROCEDURE	40
9.1 Splitter Compartment Pass-Through Routing Procedure	40

TABLE OF CONTENTS

Content	Page
9.2 Sliding Adapter Pack Pass-Through Routing Procedure	41
10 MAINTENANCE AND REPAIR PROCEDURES	45
10.1 Painting	45
10.2 Distribution Panel Adapter Replacement	45
10.3 Splitter Compartment Adapter Replacement	47
10.4 Replacing a Damaged Fiber or Connector	48
10.4.1 Splitter Output Fiber Connector Replacement	48
10.5 Door Gasket Replacement	49
10.6 Door Replacement	49
10.7 Grounding System Terminal Access Procedure	51
11 TECHNICAL ASSISTANCE	52

ABOUT THIS MANUAL

This publication describes the OmniReach 864 termination FDH 3000 cabinet. Also included are procedures for mounting the cabinet, installing additional splitter modules, installing additional distribution panels, storing the splitter output fibers, connecting the splitter output fibers to the distribution fibers, and replacing damaged components.

RELATED PUBLICATIONS

Listed below are related manuals and their publication numbers. Copies of these publications can be ordered by contacting the CommScope Technical Assistance Center at 1.800.830.5056, or by e-mail to TAC.Americas@commscope.com.

Title/Description	Publication Number
Optical Fiber Connector Wet and Dry Cleaning Instructions	ADCP-90-159
Plug And Play Splitter Installation Guide	ADCP-96-087

ADMONISHMENTS

Important safety admonishments are used throughout this manual to warn of possible hazards to persons or equipment. An admonishment identifies a possible hazard and then explains what may happen if the hazard is not avoided. The admonishments — in the form of Dangers, Warnings, and Cautions — must be followed at all times. These warnings are flagged by use of the triangular alert icon (seen below) and are listed in descending order of severity of injury or damage and likelihood of occurrence.



Danger: *Danger is used to indicate the presence of a hazard that **will** cause severe personal injury, death, or substantial property damage if the hazard is not avoided.*



Warning: *Warning is used to indicate the presence of a hazard that **can** cause severe personal injury, death, or substantial property damage if the hazard is not avoided.*



Caution: *Caution is used to indicate the presence of a hazard that **will** or **can** cause minor personal injury or property damage if the hazard is not avoided.*

GENERAL SAFETY PRECAUTIONS



Warning: *Wet conditions increase the potential for receiving an electrical shock when installing or using electrically-powered equipment. To prevent electrical shock, never install or use electrical equipment in a wet location or during a lightning storm.*



Danger: *Do not look into the ends of any optical fiber. Exposure to laser radiation may result. Do not assume the laser power is turned-off or that the fiber is disconnected at the other end.*



Danger: *Use adequate lifting equipment when moving or installing Fiber Distribution Hub cabinets. Verify that the maximum lift weight rating of the equipment is sufficient to handle the weight of the cabinet.*



Danger: *Do not stand under a Fiber Distribution Hub cabinet as it is being hoisted into position for mounting. A failure of the lifting equipment or apparatus could result in serious personal injury and cause significant damage to the cabinet.*



Warning: *Before digging, check with all local utilities for the presence of buried cables or pipes. Contact with underground cables or pipes, especially electric power cables and gas service lines, could interrupt local utility service and cause serious personal injury and extensive property damage.*

STANDARDS CERTIFICATION

Telcordia: This equipment complies with the applicable sections of GR-2898-CORE (Issue 2, December 1999)

LIST OF ACRONYMS AND ABBREVIATIONS

The acronyms and abbreviations used in this manual are detailed in the following list:

AWG	American Wire Gauge
C	Centigrade
F	Fahrenheit
FDH	Fiber Distribution Hub
FMS	polymer concrete Mounting Sleeve
FTTP	Fiber To The Premises
OSP	Outside Plant
PMF	Pad Mount Frame
PNP	Plug and Play

1 DESCRIPTION

This section provides a description of the OmniReach 864 termination FDH 3000 cabinet plus the cabinet specifications.

1.1 FDH 3000 864 Termination Cabinet

The 864 termination FDH 3000 cabinet is a secure, above-ground, outdoor fiber optic distribution cabinet that is designed to serve as a signal distribution point in Fiber To The Premises (FTTP) optical networks. The cabinet features optical splitters that allow input signals to be split into multiple connectorized outputs. The splitter function minimizes the number of field splices that have to be performed when customers are added. Customers can be added in switchboard fashion by simply repositioning connectors. The 864 termination cabinet is designed for **pedestal-mount** applications only. A typical cabinet is shown in [Figure 1](#).

The interior of the FDH 3000 864 termination cabinet consists of the following primary components:

Distribution Panels: Provide a point for connecting the splitter output fibers with the terminated distribution cable fibers. Each panel provides mounting spaces for 72 bulkhead adapters. The cabinet may be equipped with up to twelve distribution panels. Adapters for UPC/SC or APC/SC style connectors are available.

Storage Panels: Provide a temporary “parking lot” for unused splitter output fibers. Each splitter module comes with a connector pack that mounts in the storage panel. Up to thirty-six 8-position connector packs (288 fibers total) can be mounted in the storage panels.

Radius Limiters: Provide a place for storing excess slack from the splitter output fibers.


Splitter Compartments: Provide a place for mounting the splitters. Will support up to forty-eight splitters. Unused splitter slots can be used for pass-through fibers (2). The splitters specified for use with the FDH 3000 cabinet are equipped with bend-optimized fibers.

Sliding Adapter Packs (Input panel) – Provide a place for terminating the feeder cable fibers when splitter modules with connectorized input fibers are used with the cabinet. Provide a place for terminating spare feeder cable fibers when “plug and play” (PNP) splitter modules are used with the cabinet. Spare feeder cable fibers are typically used for signal pass-through functions.


Grounding System – Provides a point for grounding the cabinet and OSP cables.

The exterior shell of the FDH 3000 cabinet is constructed of heavy gauge aluminum and is coated with an almond-colored finish. Each cabinet is equipped with two front and two rear doors that provide full front access to the optical components. The cabinet doors are equipped with a tamper-resistant latch that includes a hasp for a padlock, stainless steel hinges, and door catches that prevent accidental closing. Access to the cabinet requires a 216B key tool (accessory) to release the latch handle. Lifting eyes are provided for hoisting the cabinet into position for mounting. Each cabinet is equipped with a 6-inch ground spacer/riser to provide additional ground clearance.

The cabinet is equipped with a left and right swing frame. Each swing frame rotates outward from the front of the cabinet. This provides complete access to most of the components mounted with the cabinet.

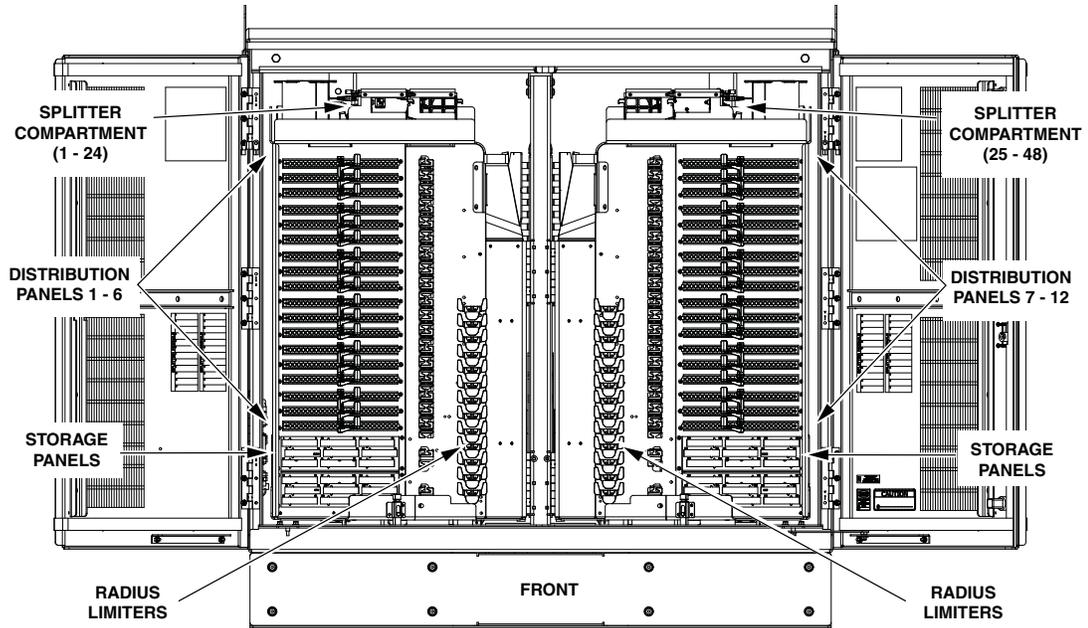

NOTE: THE CABINET IS EQUIPPED WITH A LEFT AND RIGHT SWING FRAME. EACH SWING FRAME ROTATES OUTWARD TOWARD THE FRONT OF THE CABINET. THIS PROVIDES ACCESS TO MOST OF THE COMPONENTS MOUNTED WITHIN THE CABINET.

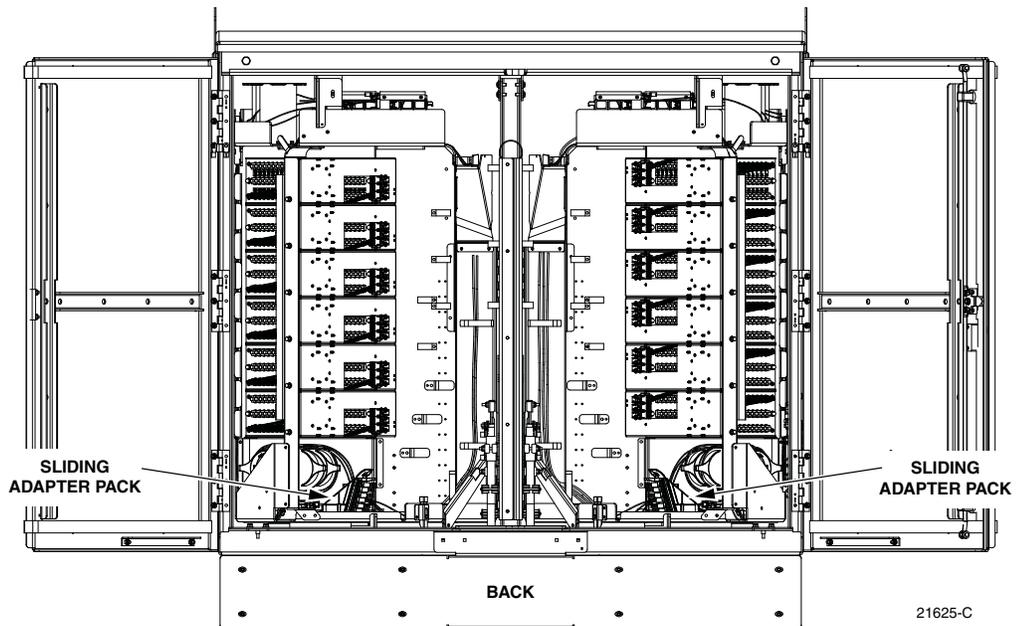

21625-C

Figure 1. FDH 3000 864 Termination Cabinet

The cabinet may be mounted on a concrete pad or on a polymer concrete mounting sleeve. Mounting kits (accessories) are available for each mounting option. The feeder and distribution cables enter/exit the cabinet from the bottom. Clamps secure the cables to the inside of the cabinet. The bottom of the cabinet is enclosed with a moisture barrier. The cable entry/exit hole is fitted with a flexible membrane to resist the entry of dust and moisture. GORE membrane vents are provided to release any moisture that may accumulate within the cabinet.

The cabinet is equipped with factory-installed outside plant (OSP) distribution and feeder cables. Ribbon and stranded type cables with either dielectric or armored construction are available. The cable stubs are 100 feet in length. Cables with metallic shields are fitted with grounding terminals which are connected to the grounding block with jumper cables. The specifications for the 864 termination FDH 3000 cabinet are provided in [Table 1](#).

Table 1. 864 Termination FDH 3000 Cabinet Specifications

PARAMETER	SPECIFICATION
Cabinet	
Dimensions (H x W x D) Pedestal-Mount (See Figure 2)	49 x 48 x 20 x inches (124.5 x 121.9 x 50.8 cm)
Weight (fully loaded)	500 lbs (227 kg)
Certification (pending)	GR-2898-CORE
Distribution panels (maximum)	12
Distribution ports	Up to 864 with twelve 72-port distribution panels
Distribution port adapters/connectors	UPC/SC or APC/SC,
Feeder/Distribution cable length	100 ft.
Splitter compartment splitter capacity	48 splitters
Splitter compartment adapter capacity	96 adapters
Storage panel capacity	288 connectors
Sliding adapter pack capacity	72 adapters
Splitter Modules	
Splitter module input and output pig-tails	Bend-optimized fiber terminated with UPC/SC or APC/SC connectors
Test bandpass	1260–1360 nm, 1480–1500 nm, 1550–1560 nm
Overall bandpass	1260–1625 nm

Table 1. 864 Termination FDH 3000 Cabinet Specifications, continued

PARAMETER	SPECIFICATION
Return loss at test bandpass	≥55 dB
Maximum insertion loss at test bandpass	Note: Specification includes the loss from the input and output connectors
1 x 2	4.1 dB with UPC, 4.5 with APC
1 x 4	7.7 dB with UPC, 8.1 dB with APC
1 x 8	11.1 dB with UPC, 11.5 dB with APC
1 x 16	13.9 dB with UPC, 14.3 dB with APC
1 x 32	17.1 dB with UPC, 17.5 dB with APC
2 x 16	15.1 dB with UPC, 15.5 dB with APC
2 x 32	18.3 dB with UPC, 18.7 with APC

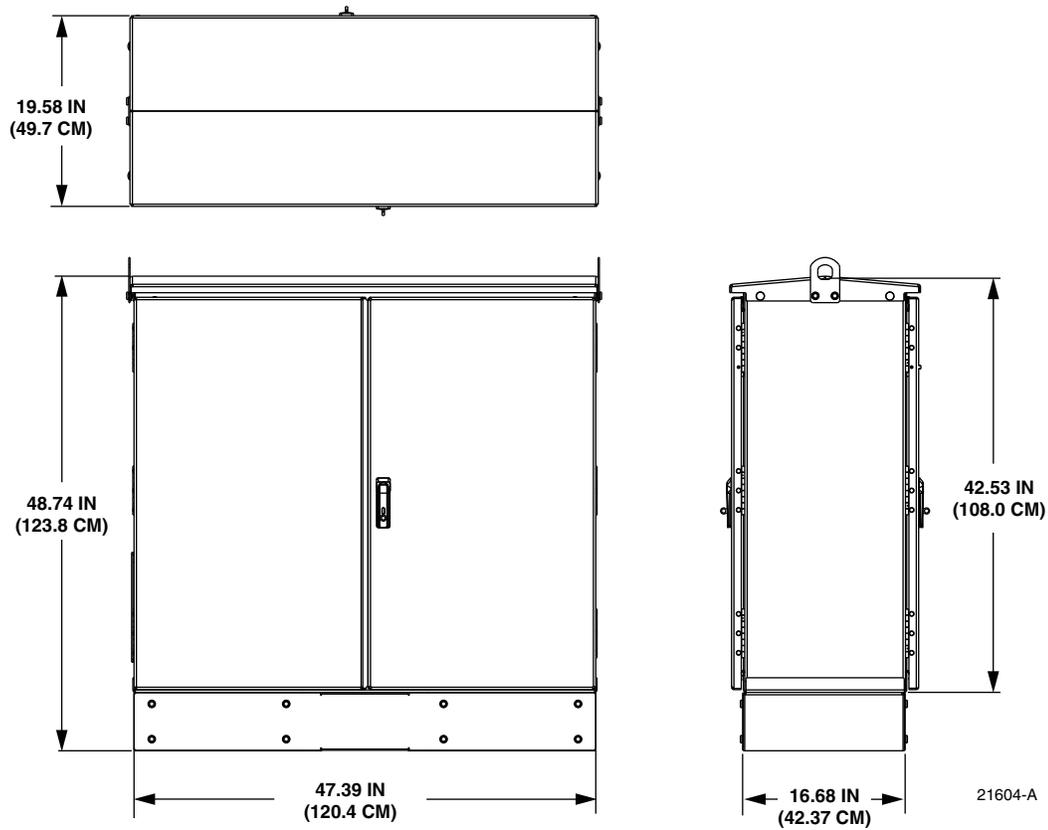


Figure 2. 864 Termination FDH 3000 Cabinet Dimensions

2 BEFORE STARTING THE INSTALLATION

This section provides general installation considerations, unpacking and inspection procedures, and lists the tools and materials required for cabinet installation.

2.1 Installation Overview

Installation of the 864 termination FDH 3000 cabinet involves the following main tasks:

Installing a Support Base (Pedestal-Mount) – The pedestal-mount cabinet must be mounted on a suitable support base. The following two mounting options are available:

- **Mounting Sleeve (FMS)** – The FMS is a polymer concrete sleeve that mounts in the ground. The FMS provides a stable mounting platform plus storage space under the cabinet for OSP cable slack. The FMS may also be used as a splicing vault for OSP cables.
- **Poured Concrete Pad** – Concrete slab with Pad Mounting Frame (PMF). The PMF is a stainless-steel frame that is embedded in the concrete during installation of the slab. The cabinet attaches to the PMF which holds it securely to the slab.

Mounting the Cabinet – After the support base is installed, the cabinet must be secured to the support base. The OSP feeder and distribution cables must be uncoiled and routed to a separate splice enclosure (not provided) before the cabinet is secured to the support base.

Splitter Installation – The cabinet may be ordered with one or two splitters. If additional splitters are required, they must be ordered separately. All splitter modules that are ordered separately must be installed in the splitter compartment and the input connectors must be mated with the terminated feeder cable fibers.

Splitter Output Fiber Connections – Service is enabled by connecting the splitter output fiber connectors to the subscriber distribution ports. Unused output fibers are temporarily “parked” in the storage panel until they are needed for service.

2.2 Unpacking and Inspection

This section provides instructions for opening the shipping boxes, verifying that all parts have been received, and verifying that no shipping damage has occurred.

Use the following procedure to unpack and inspect the cabinet and all accessories:

1. Open the shipping carton(s) and carefully unpack the cabinet and any accessories from the protective packing material.
2. Open the cabinet doors (requires 216B key tool) and check for broken or missing parts. If there are damages, contact ADC (see [Section 11](#)) for an RMA (Return Material Authorization) and to reorder if replacement is required.

2.3 Cabinet Installation Hardware

The cabinet is shipped with various parts (see [Table 2](#)) that are used for securing the cabinet to the FMS or PMF. Verify that the parts specified are received.

Table 2. Cabinet Installation Hardware

ITEM	QUANTITY
3/8 x 1-inch hex head capscrews	8
3/8-inch flat washers	8
3/8-inch lock washers	8
Isolation gasket	1

2.4 OSP Cable and Cabinet Grounding Cables

The cabinet is equipped with a common grounding block that is used to tie together all the components of the cabinet that must be grounded. The cabinet itself and any OSP cables with metallic strength members must be connected to an earth ground source. Information on grounding is provided in the sections that cover cabinet mounting.

2.5 Tools and Materials Required for Installation

The following tools and materials are required for cabinet installation:

All Cabinet Installations

- Hammer
- Wire cutter
- Utility knife
- Screwdriver (flat blade)
- 9/16-inch wrench
- Torque wrench (with 7/16-inch socket and standard screwdriver socket)
- Tape measure
- Pen or marker
- 216B key tool (accessory - required to open cabinet door)
- 3/16-inch hex-key (required to open riser security panel)
- 7/32-inch hex-key (required to remove lifting eyes)
- Padlock (optional)
- Grounding system, copper wire, and grounding clamp (per local requirements)
- Splicing equipment for splicing OSP feeder and distribution cables
- Lifting equipment for hoisting the cabinet into position for mounting
- Level
- Excavation and earth moving equipment
- Landscaping equipment and site restoration supplies

Mounting Sleeve Installation

- Mounting Sleeve kit (FMS-FD3J-KIT-A)
- Stone aggregate
- Tamping equipment
- Hole saw and drill (use to cut holes for cable conduit if pre-drilled holes are not usable)

Concrete Pad Installation

- Pad Mount Frame kit for 864 termination FDH 3000 cabinet (FD3-PMFJ06)
- Concrete finishing equipment
- Approximately 11.5 cu. ft. concrete
- Sand or gravel
- Tamping equipment
- 2 x 6 inch framing lumber
- 1 x 4 inch wooden stakes (4)
- Nails and construction screws
- Utility wire (to secure PMF during installation)
- Saw
- Drill with screwdriver bits
- Square

2.6 Cabinet Mounting

The next two sections provide installation instructions for the various cabinet mounting systems. Use whichever procedure is appropriate for the installation.

3 MOUNTING THE CABINET ON A MOUNTING SLEEVE

The FMS, shown in Figure 3, is a polymer concrete sleeve that may be used to support the cabinet at ground level. The FMS may also be used as a splicing vault. Four vertical racks are molded into the sides of the FMS to accommodate removable rungs (not provided). The rungs provide support for splice cases or OSP cable storage.

3.1 Installation Recommendations

The site chosen for the installation must conform to all local codes and any permits required must be obtained prior to the start of installation. The location must be accessible and provide adequate parking for worker and vehicle safety. Situate the FMS close to the trench that was used for routing the OSP fiber cables for the network distribution system.

The installed cabinet must not create a visual or physical obstruction to vehicular or pedestrian traffic. Ensure that there is sufficient space on all sides to facilitate cabinet installation. Depending on the landscaping requirements, the top surface of the mounting sleeve may be located from 0 to 4 inches (10.2 cm) above the surrounding grade.

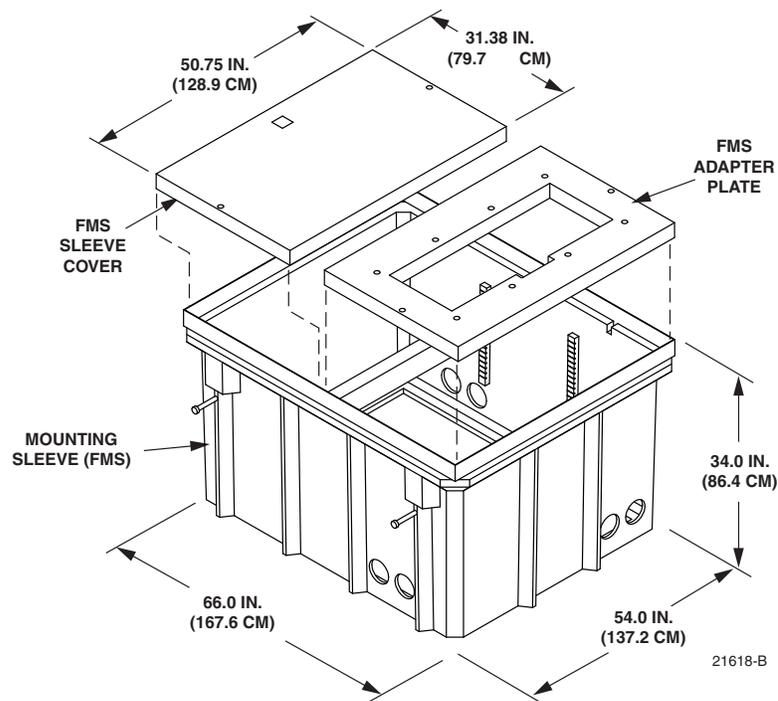


Figure 3. Mounting Sleeve (FMS-FD3J-KIT-A)

3.2 Excavation

The excavation must be large enough to provide a fill base that will maintain stability for the FMS and the cabinet mounted on it. There must be room for 12 inches (30.5 cm) of

fill below and on each side of the FMS. The excavation dimensions for the FMS are shown in Figure 4. Excavate a rectangular hole for the FMS.

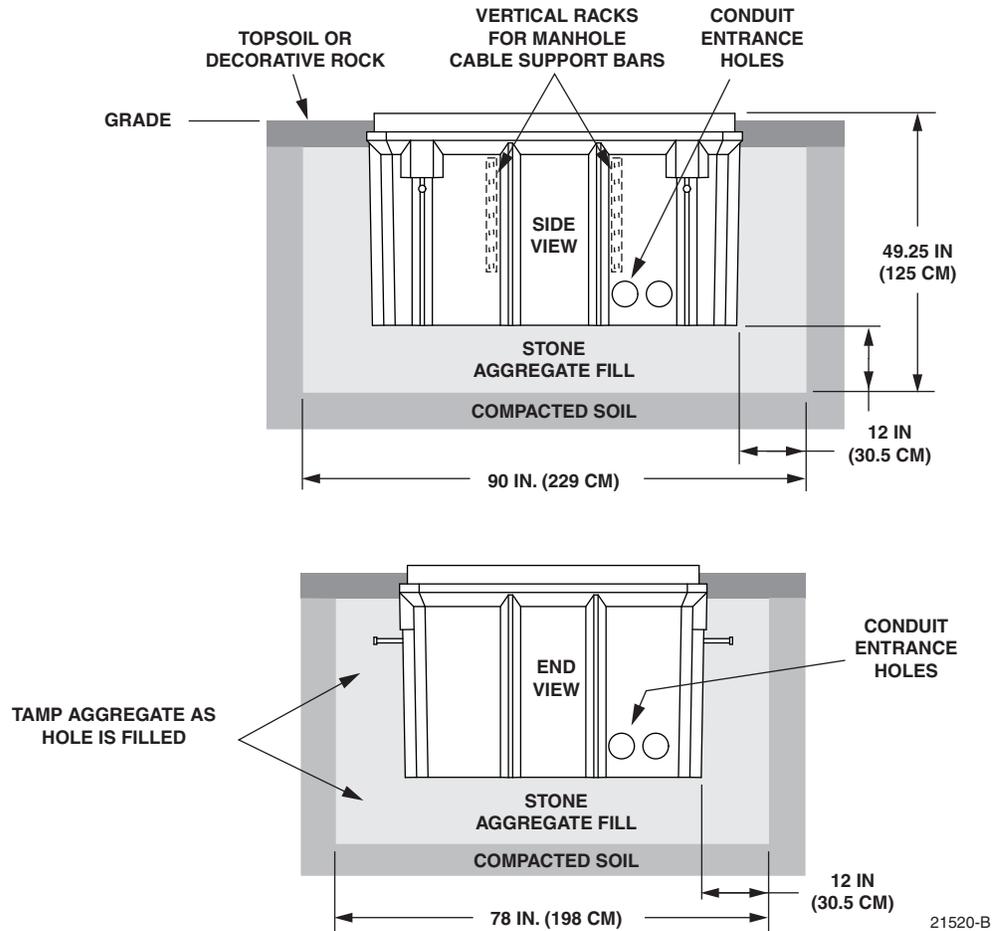


Figure 4. Excavation Recommendations for FMS-ACE300-KIT-A

3.3 Placement of the FMS



Danger: Use adequate lifting equipment when installing the FMS. Do not stand in the hole while placing the FMS in position. An unexpected shift of the FMS could result in personal injury.

Use the following procedures to place the FMS into the excavation.

1. Fill the bottom of the hole with stone aggregate, tamping it as it is filled to build a 12 inch (30.5 cm) layer with a level surface. The stone aggregate will provide a stable base to support the FMS.

- ▶ **Note:** Use crushed rock 3/8-inch or less in size mixed with stone dust (per local practice) to fill the hole. The name of the material may differ in different geographical areas. Possible names are Class 5, stone dust, aughts (0s) and ones (1s), or stone aggregate
- 2. Use appropriate lifting equipment to place the FMS into the center of the hole. Lifting loops are provided on either side of the FMS for attaching a sling or chain.
- 3. Use a carpenter's level to verify that the FMS is level. If it is necessary to add or remove fill for leveling, tamp any added fill to maintain the base stability.

3.4 Cable Conduit Installation

Select the conduit entrance holes (see [Figure 4](#)) for the OSP feeder and distribution cables. If necessary, additional conduit entrance holes may be cut using a power drill and hole saw. Place and route the conduit into the entrance hole(s). If preferred, the FMS may be installed without conduit. OSP cables may be routed into the FMS at any point that is convenient. Cut the cable entrance hole to match the size of the cable.

3.5 Grounding System Installation

Install a grounding system (not provided) that meets all local electrical codes. Check local codes for grounding system installation, use of clamps, wire size, and any other grounding requirements. Typically, #6 AWG copper wire is used for the grounding wire. Install the grounding system inside the FMS where it will not interfere with the conduit or cables. Leave sufficient slack in the grounding wire to allow it to be routed into the cabinet after the cabinet is mounted on the sleeve.

3.6 Back Fill

If installing conduit, hand shovel stone aggregate under the conduit to avoid damage from the power tamper. Complete the back fill as follows:

1. Add stone aggregate evenly around the FMS and tamp. Fill to approximately 6 inches (15.2 cm) from the top of the excavation.
2. Complete the back-fill with crushed rock or topsoil depending on the landscaping requirements. The top surface of the mounting sleeve may be located from 0 to 4 inches (10.2 cm) above the surrounding grade (see [Figure 4](#)).

3.7 Mounting the Cabinet on the FMS

Use the 216B key tool to un-latch and latch the cabinet doors as needed during the mounting process. Refer to [Figure 5](#) as necessary when mounting the cabinet.



Warning: Use appropriate lifting equipment when moving or installing the cabinet. Do not stand under a cabinet as it is being hoisted into position for mounting. A failure of the lifting equipment could result in serious personal injury.

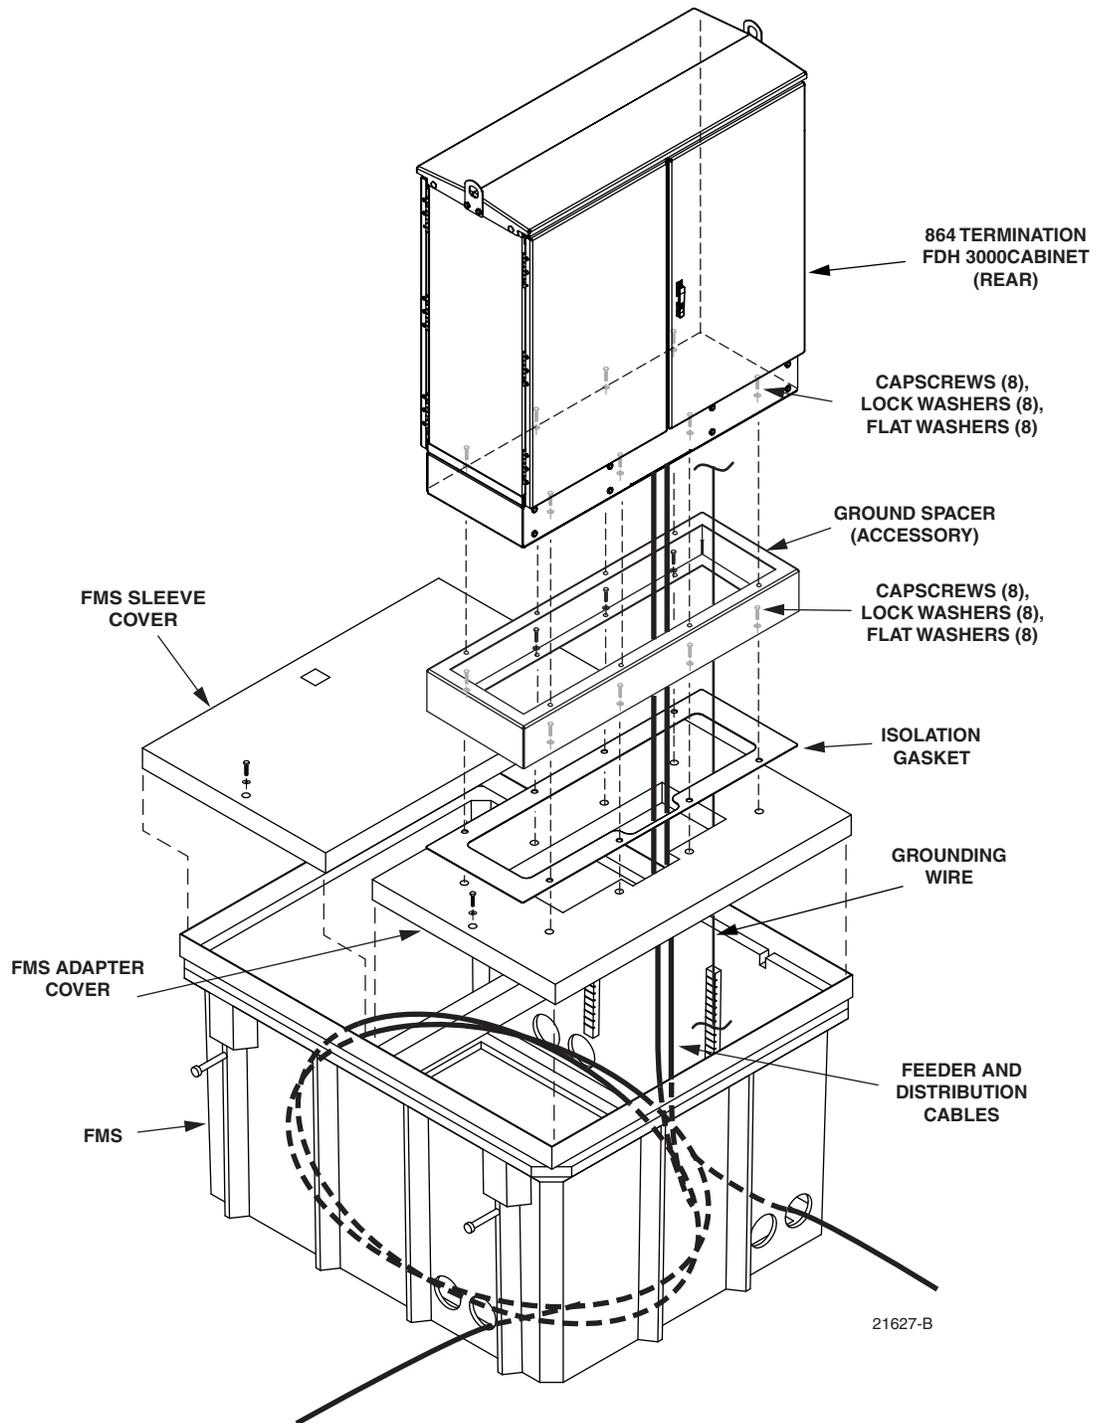


Figure 5. Mounting the 864 Termination FDH 3000 Pedestal-Mount Cabinet on the FMS

Use the following procedure to mount the cabinet on the FMS:

1. Use a 3/16-inch hex-key to remove the screws that secure the access covers to the front and back sides of the cabinet ground spacer/riser as shown in [Figure 6](#).

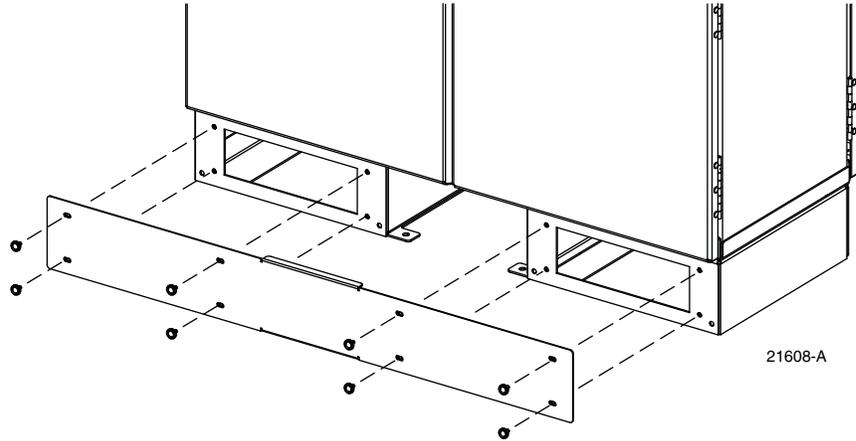


Figure 6. Removing Access Covers From Ground Spacer/Riser

2. Remove the access covers from the ground spacer/riser and set aside both the covers and the screws for reuse.
3. Mount the FMS adapter cover on the FMS and secure using the two capscrews and flat washers provided. Tighten each capscrew securely.
4. Place the isolation gasket (provided with cabinet) on the adapter cover and align the holes in the gasket with the holes in the adapter cover. Make sure the side of the gasket with the cut-out section aligns with the cut-out in the adapter cover.
5. If a ground spacer/riser (optional accessory) will be installed, place the spacer in position for mounting on the adapter cover. The isolation gasket installed in step 4 should remain in place between the adapter cover and ground spacer. If a ground spacer will not be installed, proceed to step 8.
6. Align the mounting holes in the spacer/riser with the mounting holes in the adapter cover.
7. Secure the spacer/riser to the adapter cover using the eight capscrews, eight lock washers, and eight flat washers provided with the spacer. Tighten all capscrews securely.
8. Using appropriate lifting equipment, hoist the cabinet several feet into the air to provide access to the feeder and distribution cables.



Danger: Do not stand directly under the cabinet as it is being hoisted into position for cable installation. A failure of the lifting equipment could result in serious personal injury.



Note: Label or tag the stub end of each cable so it can be identified after it is routed to the splice enclosure.

9. Carefully route the stubbed feeder and distribution cables through the rectangular opening in the ground spacer/riser or adapter cover and into the FMS.
10. Feed the stubbed feeder and distribution cables into the appropriate conduit sections and route to the splice enclosure (not provided). Some excess cable slack may be stored in the bottom of the FMS.
 - ▶ **Note:** A separate splice enclosure (not provided) is required for splicing the cabinet OSP cables to the network OSP cables. If required, the splice enclosure may be mounted within the FMS.
11. Lower the cabinet onto the ground spacer/riser or adapter cover and align the mounting holes in the cabinet base with the threaded holes in the spacer/riser or cover. If a spacer/riser was not installed, leave the isolation gasket (installed in step 4) in place on the adapter cover.
12. Secure the cabinet to the adapter cover or spacer using the eight capscrews, lock washers, and flat washers provided with the cover. Tighten all eight capscrews securely.
13. Install the FMS cover onto the FMS and secure using the two capscrews and washers provided. Tighten both capscrews securely.
 - ▶ **Note:** The FMS cover may be installed at a later time to allow the interior of the FMS sleeve to be accessed for cable installation, ground wire installation, or splicing.
14. The lifting eyes may be left in place or removed from the cabinet. To remove the lifting eyes, use a 7/32-inch hex-key to remove the lifting eye screws. Store the lifting eyes inside the cabinet and then re-install the lifting eye screws in the cabinet.
15. Reinstall the front and back access covers that were removed in step 1. Use a 3/16-inch hex-key to tighten the screws that secure the access covers to the cabinet ground spacer/riser.

3.8 Grounding Wire Connection To Cabinet

Prior to mounting the cabinet, a grounding system and grounding wire should have been installed (see [Section 3.5](#)) in the space below the cabinet. Use the following procedure to connect the grounding wire to the cabinet:

1. Locate the grounding wire that was installed prior to mounting the cabinet on the FMS.
2. Working from the bottom side of the cabinet, insert the grounding wire through the flexible membrane at the point indicated in [Figure 7](#).
3. Route the grounding wire to the cabinet grounding lug located on the right side (viewed from the back) of the cabinet.
4. Attach the grounding wire to the cabinet grounding lug. The grounding lug can be used for #6 – 14 AWG wire.

5. Tighten the grounding lug set screw to 30 to 35 lbs force – inches (3.4 to 4.0 Nm of torque).
6. Leave sufficient slack so the grounding wire can be routed and repositioned as needed.

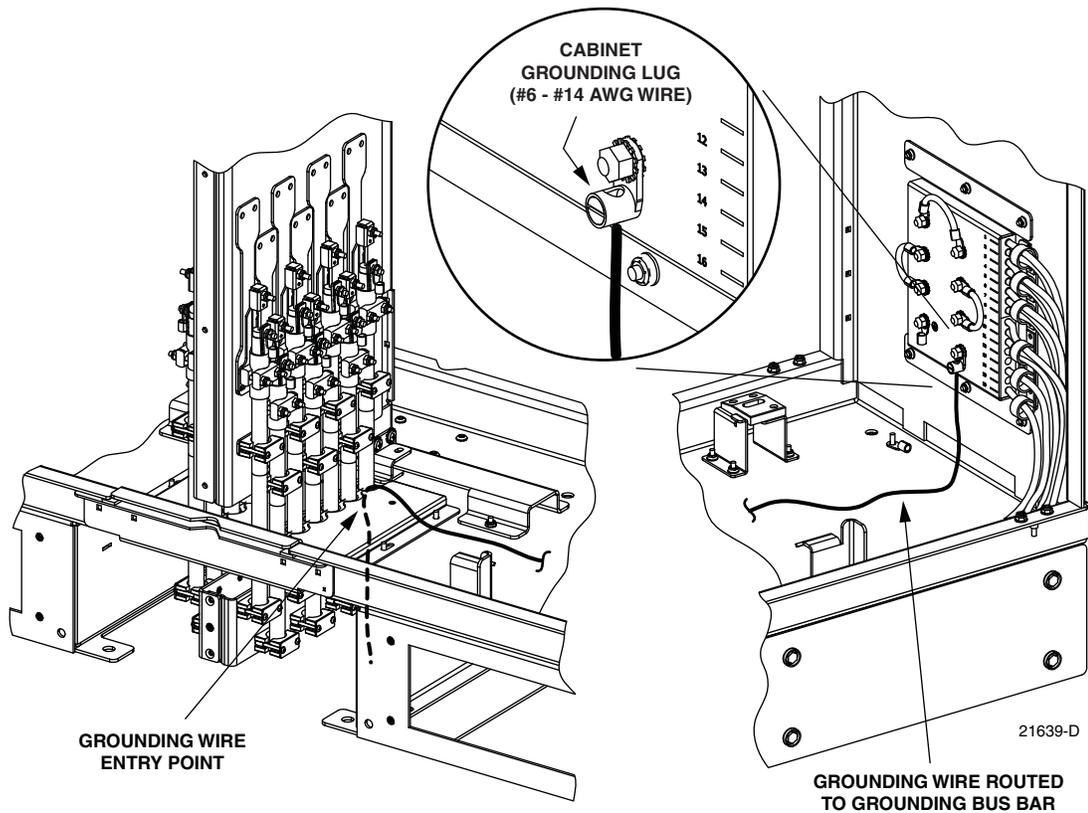


Figure 7. Grounding Wire Connection To Grounding Bus Bar

4 MOUNTING THE CABINET ON A CONCRETE PAD

The Pad Mount Frame (PMF), shown in [Figure 8](#), is a stainless steel frame that provides a mounting base for the cabinet when embedded in a concrete foundation.



Caution: *Mounting the cabinet directly on a concrete pad may cause chemical corrosive action to the cabinet. Use only the Pad Mount Frame (PMF) as a mounting base for the cabinet. Do not use caulking compounds as a sealer between the cabinet and the PMF.*

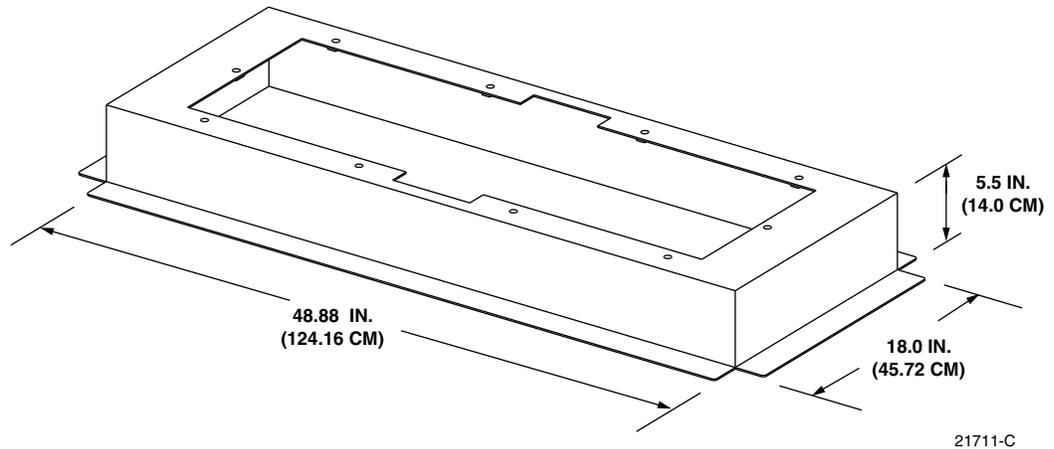


Figure 8. Pad Mount Frame Dimensions

4.1 Installation Recommendations

The site chosen for the installation must conform to all local codes and any permits required must be obtained prior to the start of installation. The location must be accessible and provide adequate parking for worker and vehicle safety. Situate the concrete pad close to the trench that was used for routing the OSP fiber cables for the network distribution system.

The installed cabinet must not create a visual or physical obstruction to vehicular or pedestrian traffic. Ensure that there is sufficient space on all sides to facilitate cabinet installation. Depending on the landscaping requirements, the top surface of the concrete pad may be located from 0 to 3 inches (7.6 cm) above the surrounding grade.

4.2 Base Construction and Conduit Installation

Prepare a base for the concrete pad that meets all local code requirements. The base must have a footing of 4 to 6 inches (10.2 to 15.2 cm) of sand or gravel (per local practice) on firmly compacted soil. Refer to the construction diagram in [Figure 9](#) for details.

Install the cable conduit from below and position it so that the top of each upward bend will be located within the PMF opening at the indicated point. When installed, the top of

the conduit should be located 1 to 2 inches (2.54 to 5.08 cm) **below** the top of the finished concrete pad. Install the conduit **before** pouring the pad.

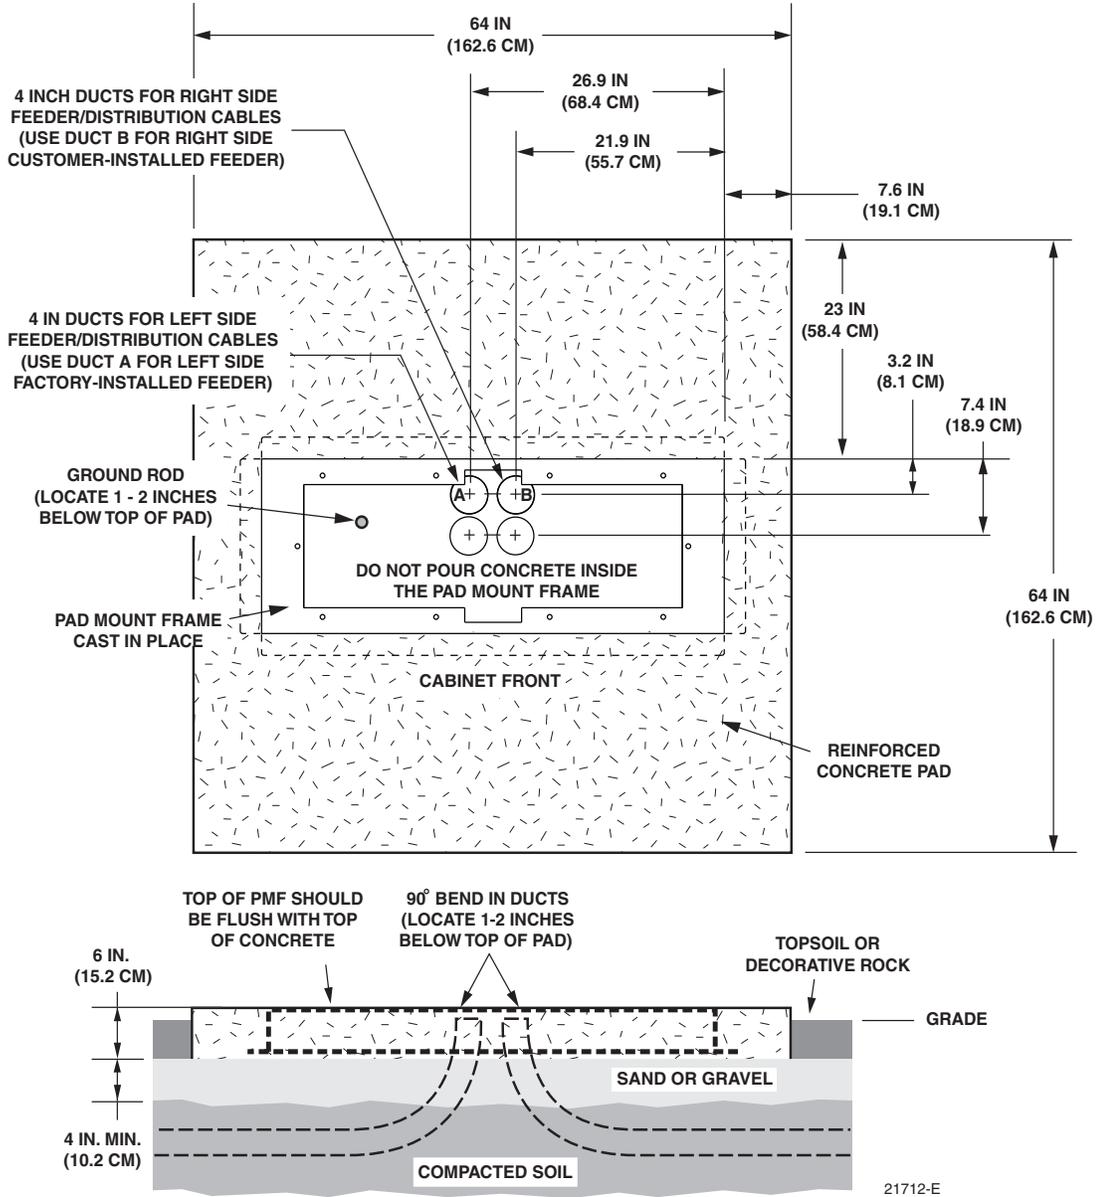


Figure 9. Constructing the Concrete Pad for the 864 Termination FDH 3000 Pedestal-Mount Cabinet

A template is provided with the PMF kit. The template may be used to determine the cable conduit locations. Place the template over the top of the PMF and align corner

holes in the template with the center holes in the PMF as shown in [Figure 10](#). The 4-inch holes punched in the template show the locations for the conduit within the PMF.

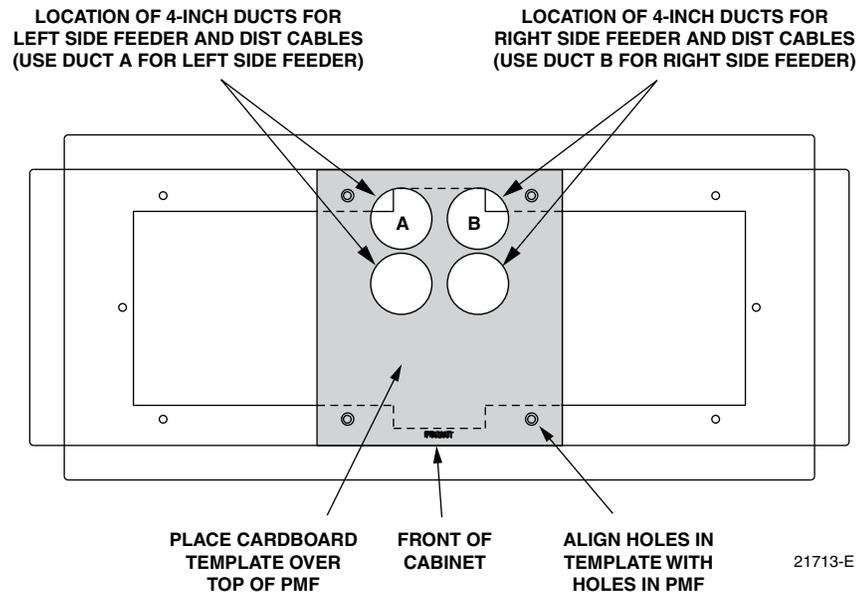


Figure 10. Using the Template To Determine Duct Location Within the PMF

4.3 Concrete Pad Construction

Use the following procedure to construct the concrete pad:

1. Build a wood form for the concrete pad using 2 x 6 framing lumber as shown in [Figure 11](#).
2. Locate the PMF as shown in the construction diagram (see [Figure 9](#)). When installed, the top surface of the PMF must be flush and level with the top of the concrete pad.
- ▶ **Note:** Use temporary top framing to keep the top surface of the PMF flush and level with the top of the concrete pad (see [Figure 11](#)).
3. Place reinforcing material inside the form but outside of the PMF.
4. Verify that the PMF and form are level. Depending on the landscaping requirements, the top surface of the concrete pad may be 0 to 3 inches (0 to 7.6 cm) above the final grade. The weld nuts are covered with plugs which must be left in place until the enclosure is mounted.
5. Pour the concrete to form the pad but do *not* pour concrete into the center area of the PMF.

- ▶ **Note:** Allow some concrete to flow under the flanges on the bottom of the PMF so the PMF will be locked in place when the concrete hardens. However, do not allow concrete to fill the center of the PMF. If necessary, partially fill the center of the PMF with sand or gravel to prevent an inflow of concrete.
6. Remove the top framing and the temporary support wires when the concrete is ready to be finished.
 7. Allow concrete to cure before proceeding with the installation.

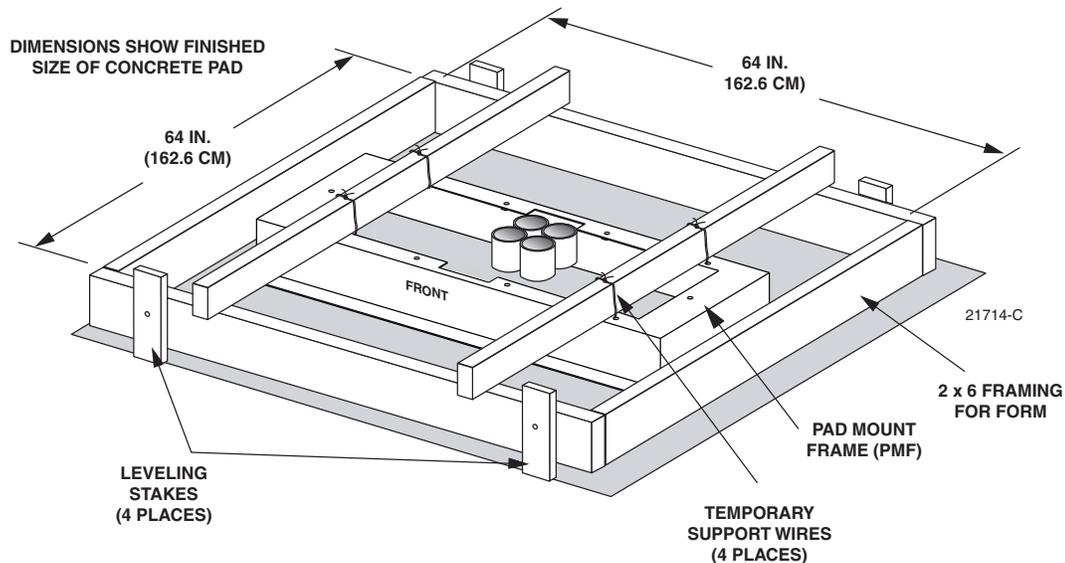


Figure 11. Concrete Pad Framing

4.4 Grounding System Installation

Install a grounding system (not provided) that meets all local electrical codes. Check local codes for grounding system installation, use of clamps, wire size, and any other grounding requirements. Typically, #6 AWG copper wire is used for the ground wire. If the grounding system includes a ground rod, install the rod (see [Figure 9](#)) within the PMF opening at the indicated point. When installed, the top of the rod should be located 1 to 2 inches (2.54 to 5.08 cm) **below** the top of the finished concrete pad. Leave sufficient slack in the grounding wire to allow it to be routed into the cabinet after the cabinet is mounted on the pad.

4.5 Mounting the Cabinet on the Concrete Pad

Use the 216B key tool to un-latch and latch the cabinet doors as needed during the mounting process. Refer to [Figure 12](#) as necessary when mounting the cabinet.



Warning: Use appropriate lifting equipment when moving or installing the cabinet. Do not stand under the cabinet as it is being hoisted into position for installation. A failure of the lifting equipment could result in serious personal injury.

Use the following procedures to mount the cabinet on the concrete pad.

1. Use a 3/16-inch hex-key to remove the screws that secure the front and back access covers to the cabinet ground spacer/riser as shown in [Figure 13](#).
 2. Remove the plastic plugs that are installed in the threaded holes of the PMF and clean off any concrete that may have adhered to the top of the PMF.
- ▶ **Note:** Make sure all remnants of concrete are removed from the PMF prior to mounting the cabinet. It is not necessary to use shims to level or align the cabinet as long as the top surface of the PMF is clean and free of any installation debris.

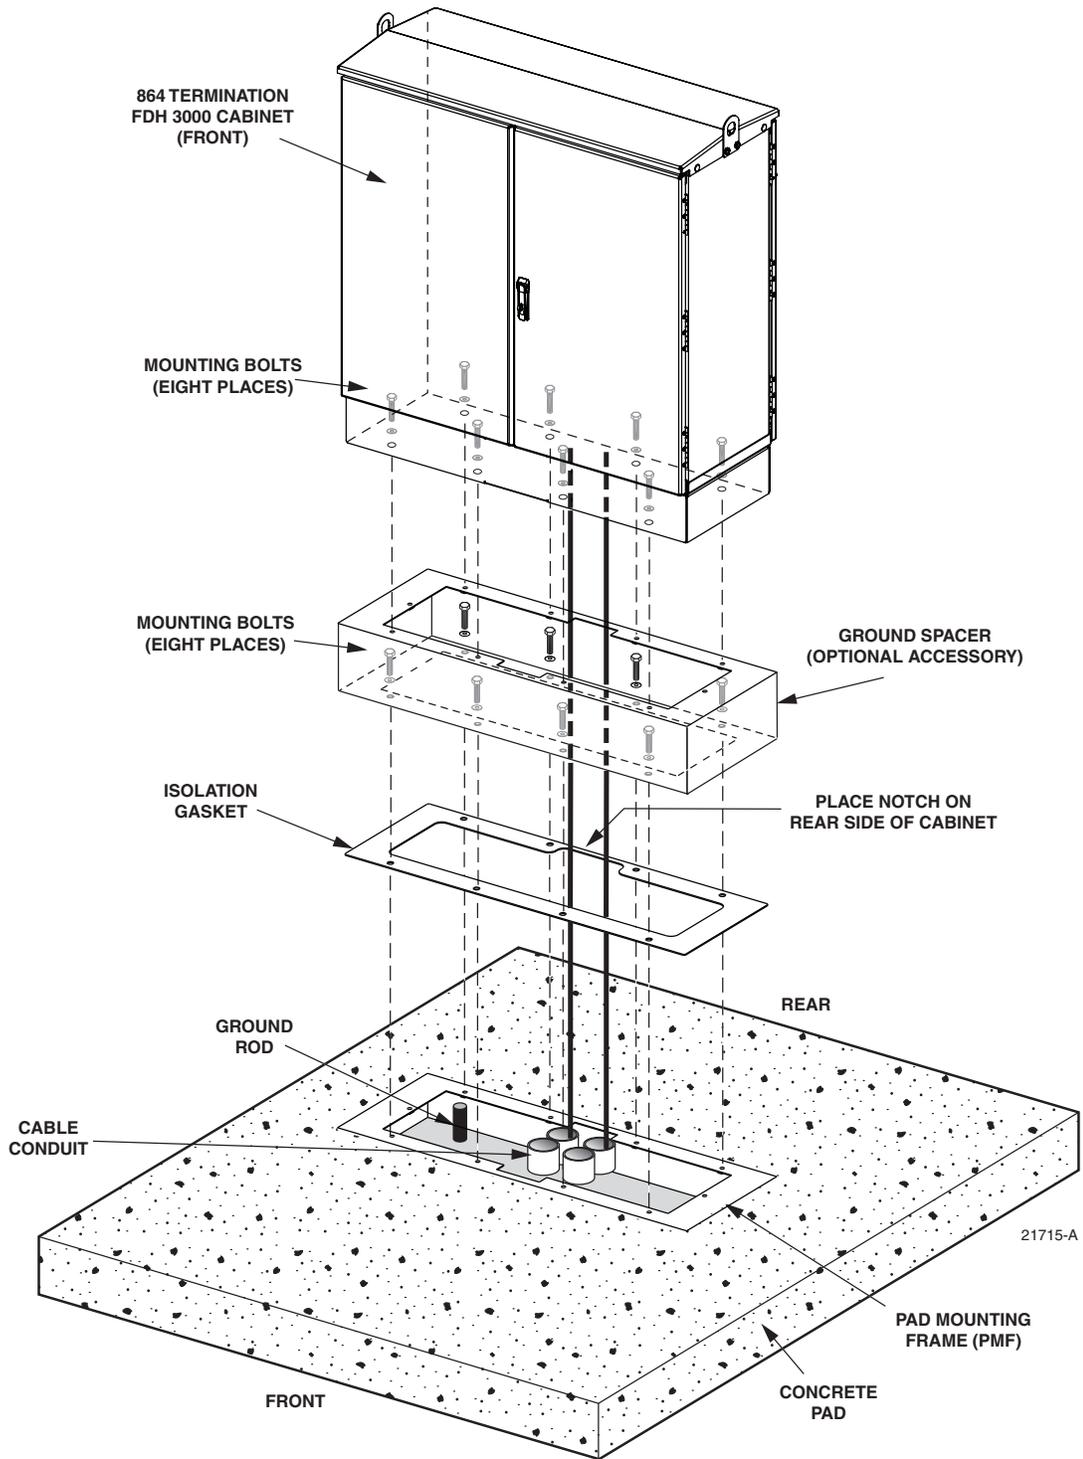


Figure 12. Mounting the 864 Termination FDH 3000 Pedestal-Mount Cabinet on the Concrete Pad

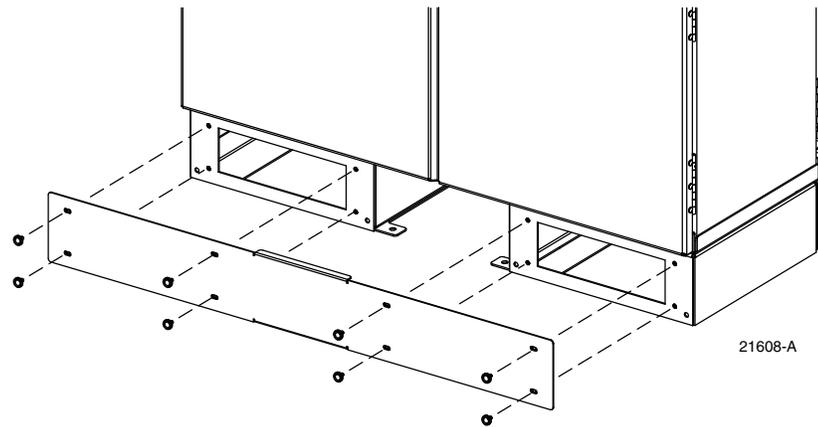


Figure 13. Removing Access Covers From Ground Spacer/Riser

3. Place the isolation gasket (provided with cabinet) on the PMF and align the holes in the gasket with the holes in the PMF. Make sure the side of the gasket with the cut-out section is on the side of the PMF that corresponds to the **rear** side of the cabinet.
4. If a ground spacer/riser (accessory) will be installed, place the spacer/riser in position for mounting on the PMF. The isolation gasket installed in step 3 should remain in place between the PMF and spacer/riser. If a spacer/riser will not be installed, proceed to step 7.
5. Align the mounting holes in the spacer/riser with the mounting holes in the PMF.
6. Secure the spacer/riser to the PMF using the eight capscrews, eight lock washers, and eight flat washers provided. Tighten all capscrews securely.
7. Using appropriate lifting equipment, hoist the cabinet several feet into the air to provide access to the feeder and distribution cables.



Danger: Do not stand directly under the cabinet as it is being hoisted into position for cable installation. A failure of the lifting equipment could result in serious personal injury.

- ▶ **Note:** Label or tag the stub end of each cable so it can be identified after it is routed to the splice enclosure.
8. Feed the stubbed feeder and distribution cables into the appropriate conduit sections and route to the splice enclosure (not provided).
- ▶ **Note:** A separate splice enclosure (not provided) is required for splicing the cabinet OSP feeder and distribution cables to the network cables.
9. Lower the cabinet onto the ground spacer/riser or PMF and align the mounting holes in the cabinet base with the threaded holes in the spacer/riser or PMF. If a spacer/riser was not installed, leave the isolation gasket (installed in step 3) in place on the PMF.

10. Secure the cabinet to the spacer/riser or PMF using the eight capscrews, eight lock washers, and eight flat washers provided with the cabinet. Tighten all eight capscrews securely.
11. The lifting eyes may be left in place or removed from the cabinet. To remove the lifting eyes, use a 7/32-inch hex-key to remove the lifting eye screws. Store the lifting eyes inside the cabinet and then re-install the lifting eye screws in the cabinet.

4.6 Grounding Wire Connection To Cabinet

Prior to mounting the cabinet, a grounding system and grounding wire should have been installed (see [Section 4.4](#)) in the space below the cabinet. Use the following procedure to connect the grounding wire to the cabinet:

1. Locate the grounding wire that was installed prior to mounting the cabinet on the pad.
2. Working through the back access opening, insert the grounding wire through the flexible membrane at the point indicated in [Figure 14](#).
3. Route the grounding wire to the cabinet grounding lug located on the right side (viewed from the back) of the cabinet.
4. Attach the grounding wire to the cabinet grounding lug. The grounding lug can be used for #6 – 14 AWG wire.
5. Tighten the grounding lug set screw to 30 to 35 lbs force – inches (3.4 to 4.0 Nm of torque).
6. Leave sufficient slack so the grounding wire can be routed and repositioned as needed.
7. Reinstall the front and back access covers that were removed in step 1 of [Section 4.5](#). Use a 3/16-inch hex-key to tighten the screws that secure the access covers to the cabinet ground spacer/riser.

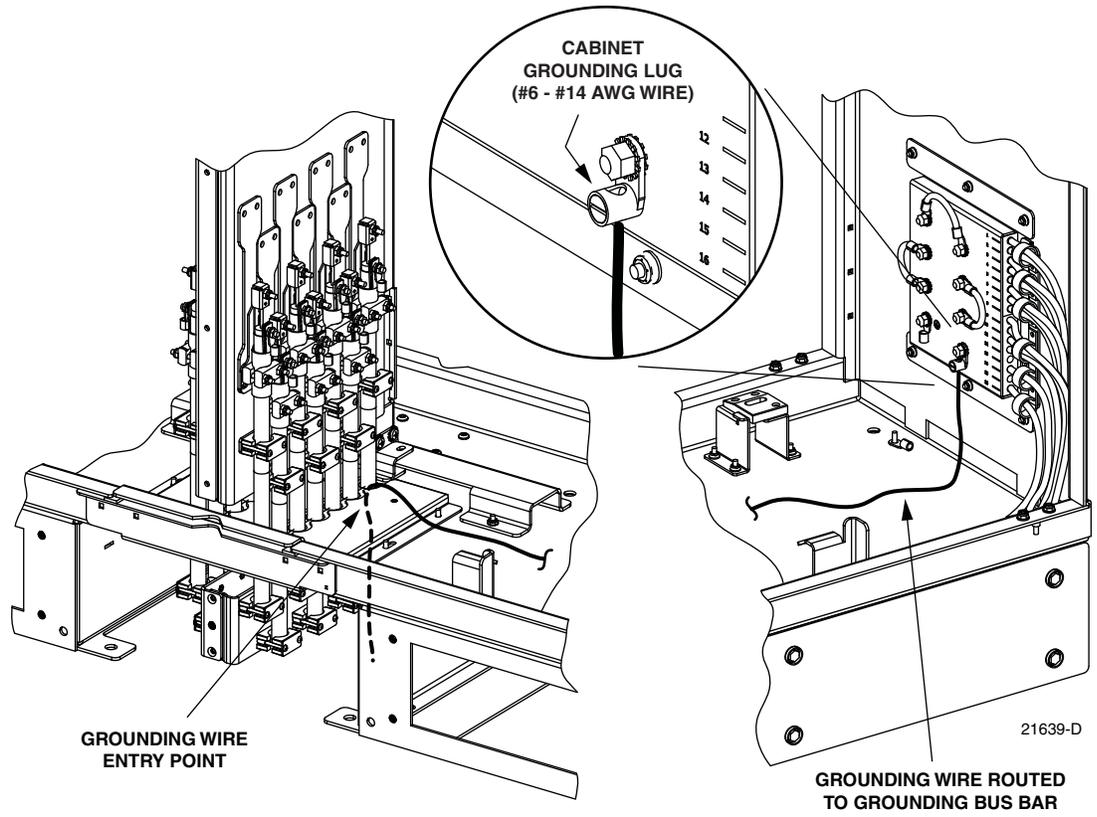


Figure 14. Grounding Wire Connection To Cabinet

5 FEEDER AND DISTRIBUTION CABLE CONFIGURATION INFORMATION

The 864 termination FDH 3000 cabinet is equipped with pre-installed OSP feeder and distribution cables. The cable stub ends must be spliced to the network feeder and distribution cables at a separate splice enclosure (not provided). The feeder and distribution stub cables are 100 feet (30.5 meters) in length. The following sections describe how the cables are configured for splicing.

5.1 OSP Feeder Cable Configuration

The feeder cable may have a fiber count of 12, 24, 48, or 72 fibers depending on the option ordered. Within the cabinet, the feeder cable is secured with a pair of clamps. Beyond the clamps, the outer sheath of the cable is removed to expose the optical fiber subunits. Depending on the option ordered, the cable subunits are routed to the splitter compartment and/or the sliding adapter pack. The subunits are numbered and the individual fibers are color-coded for identification. Always perform a light test before splicing to determine the port location for each fiber. A diagram of the feeder cable routing is shown in [Figure 15](#).

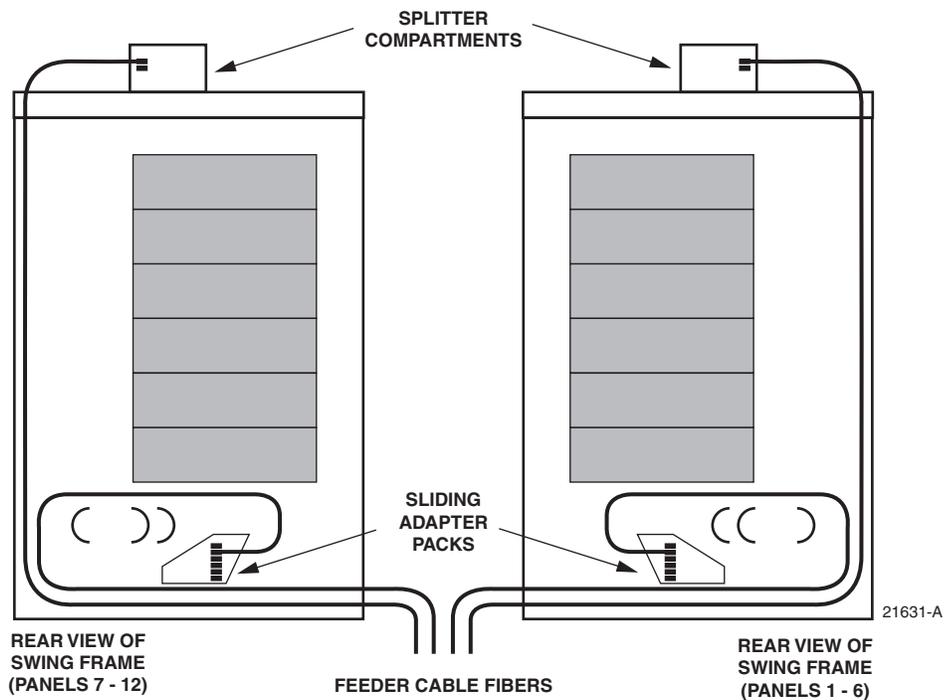


Figure 15. Feeder Cable Typical Configuration

The cabinet may be ordered with either one or two splitters pre-installed. Up to forty-eight splitters with either single or dual input ports may be mounted in the cabinet. Designation labels are provided on top of the splitter compartment and on the doors for recording feeder cable and splitter module information. The splitters specified for use with the FDH 3000 cabinet are equipped with bend-optimized fibers.

5.2 OSP Distribution Cable Configuration

Each distribution cable has a fiber count that is a multiple of 72. From 1 to 12 distribution cables may be present depending on the number of distribution panels ordered and the cable fiber count. Within the cabinet, each distribution cable is secured with a pair of clamps. Beyond the clamps, the outer sheath of the cable is removed to expose the optical fiber subunits. Each subunit is fanned out into 12 individual fibers, each of which is terminated with a connector.

The fiber subunits are routed to the back of the distribution panels. Each fiber connector is connected to a specified bulkhead adapter at the rear of the panel. Depending on the option ordered, the distribution panels may be equipped with either UPC/SC or APC/SC adapters. A diagram of the distribution cable configuration is shown in [Figure 16](#). Distribution cables with 72, 144, 216, 288, 360, or 432 fibers are available.

- ▶ **Note:** The maximum fiber count for stranded-type fiber optic cables is 288 fibers per cable. Ribbon-type cables may have a maximum fiber count of 432 fibers per cable.

Designation labels are provided on the cabinet doors for recording subscriber information for each distribution panel port. The labels indicate the fiber number and cable number associated with each fiber port. The subunits are numbered and the individual fibers are color-coded for identification. Always perform a light test before splicing to determine the port location for each fiber.

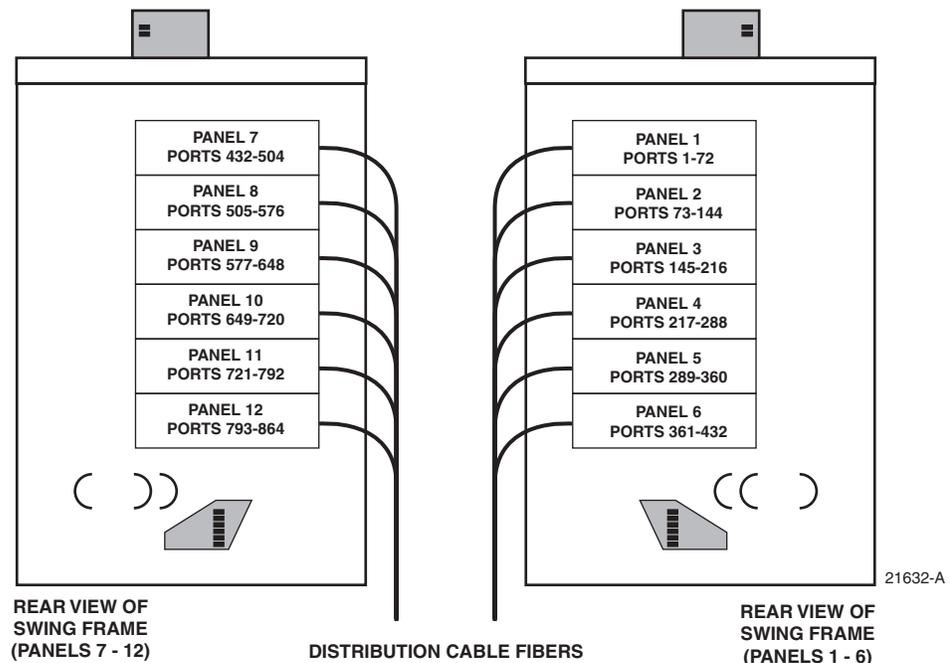


Figure 16. Distribution Cable Configuration

6 PLUG AND PLAY SPLITTER MODULE INSTALLATION


The 864 termination FDH 3000 cabinet can accommodate up to forty-eight splitter modules. Depending on the splitter type, plug and play splitter modules are equipped with either one or two input connectors. Inserting the splitter into the splitter compartment connects the splitter input connector(s) to the feeder cable connector(s).

Each plug and play splitter module is equipped with up to 32 connectorized output fibers. The splitter output fibers may be stored for later use or routed to the distribution panels for connection to the distribution ports. Additional instructions for installing plug and play splitter modules are provided in the FDH 3000 Plug and Play Splitter Installation Guide (ADCP-96-087). Use only splitters equipped with bend-optimized fibers.

Use the following procedure to install additional splitters in the cabinet:

1. Locate the splitter module compartments that are mounted on top of each swing frame as shown in [Figure 17](#).
2. Identify the next available splitter mounting position.

► **Note:** Install splitters in the order shown in [Figure 18](#). When the splitter compartment on the left swing frame is filled, use the splitter compartment on the right swing frame.

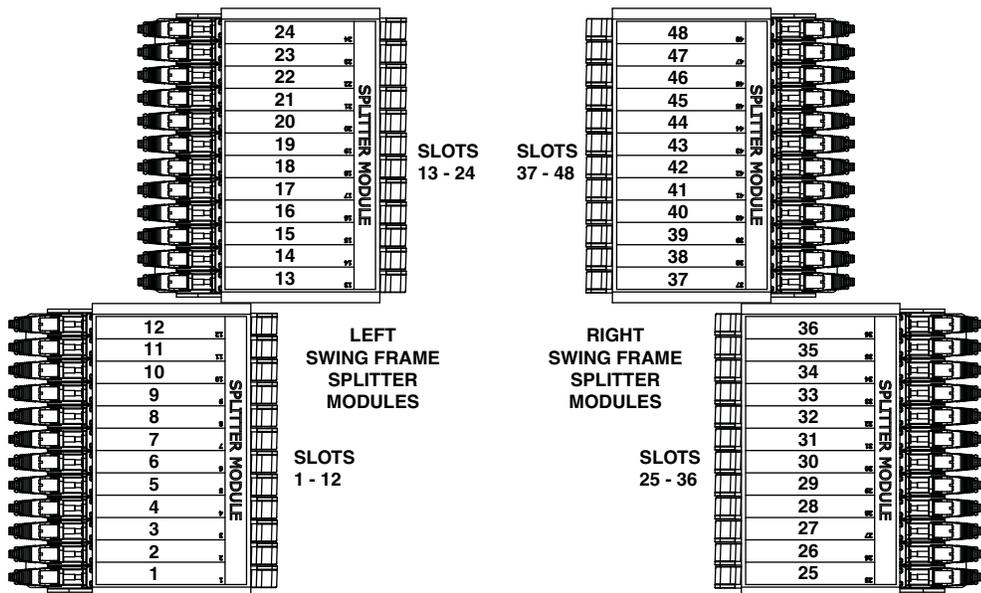

21611-B

Figure 17. Splitter Compartment Layout - Top View

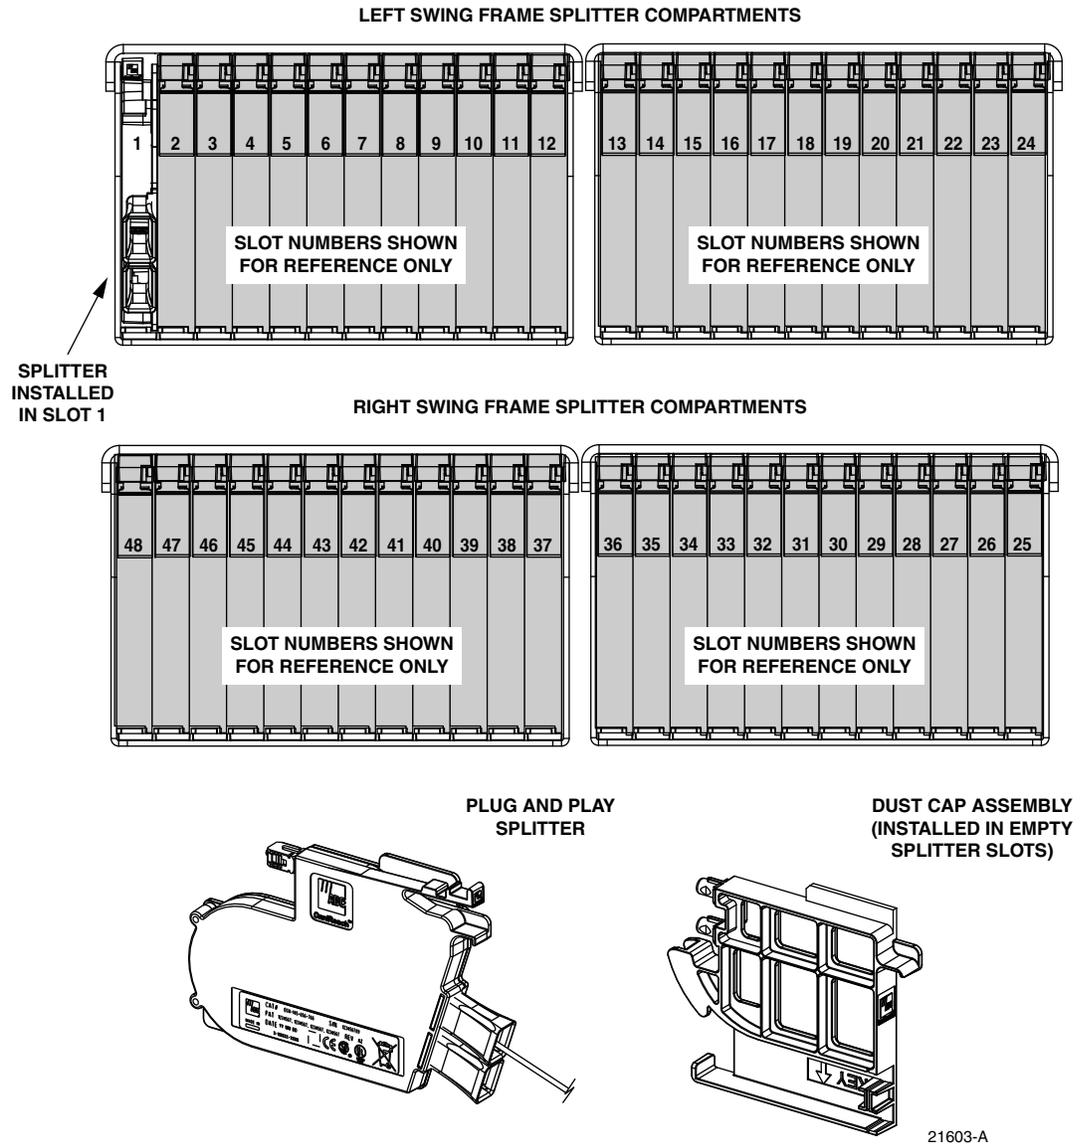


Figure 18. Splitter Compartment Mounting Slot Assignments

3. Remove the dust cap assembly from the selected splitter slot.
4. Remove the corresponding feeder cable connector(s) from the rear of the splitter compartment as shown in [Figure 19](#).



Warning: *Infrared radiation is invisible and can seriously damage the retina of the eye. Do not look into the ends of any optical fiber. Do not look directly into the optical adapters or connectors. Exposure to invisible laser radiation may result. An optical power meter should be used to verify active fibers. A protective cap or hood MUST be immediately placed over any radiating adapter or optical connector to avoid the potential of dangerous amounts of radiation exposure. This practice also prevents dirt particles from entering the adapter or connector.*

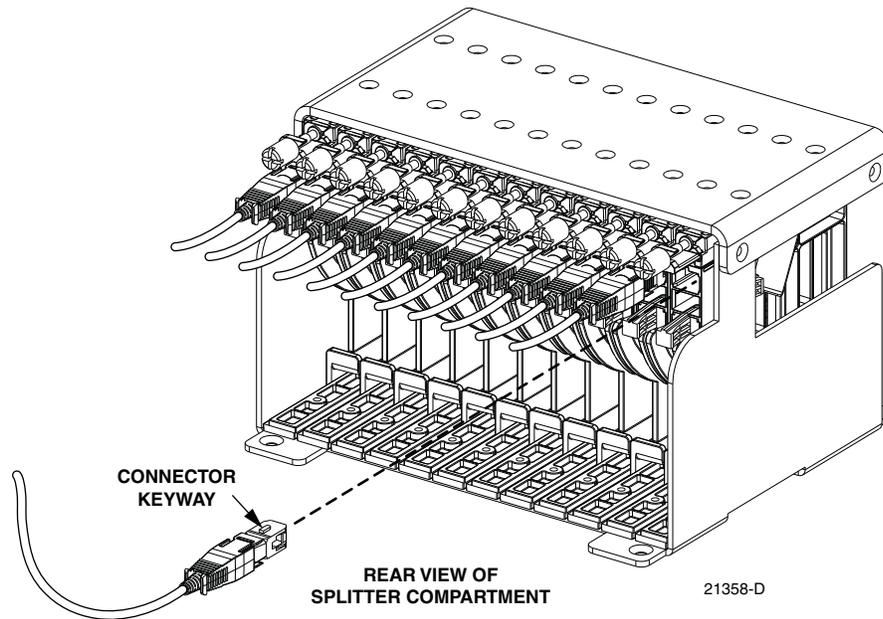


Figure 19. Feeder Cable Connector

5. Clean the feeder cable connector(s) as specified in the Optical Fiber Systems Cleaning and Mating Instructions (ADCP-90-159).
6. Reinstall the feeder cable connector(s) at the rear of the splitter compartment.
7. Insert the splitter into the mounting slot as shown in [Figure 20](#).
8. Route the splitter output fibers to the connector storage panel or to the designated subscriber port. Refer to [Section 8](#) for the routing procedure.

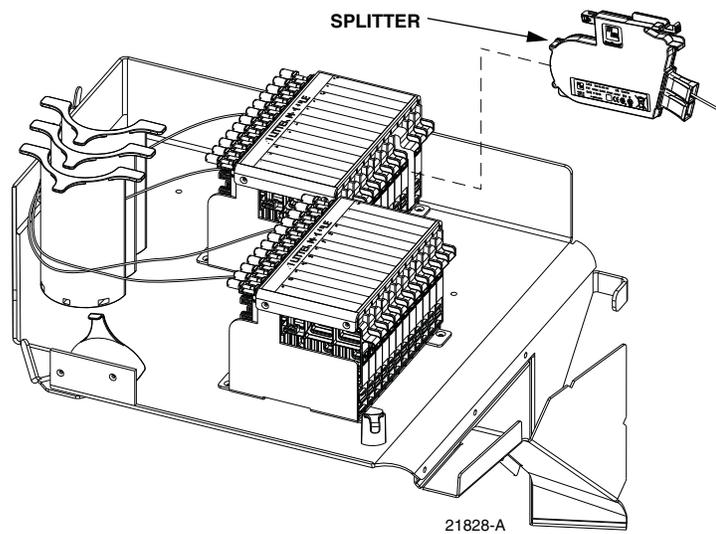


Figure 20. Splitter Installation

7 DISTRIBUTION PANEL INSTALLATION

The 864 termination FDH 3000 cabinet may be ordered with up to twelve 72-position distribution panels pre-installed in the cabinet. If the cabinet is equipped with less than twelve panels, additional panels may be installed as needed. When ordered separately, distribution panels are pre-cabled for quick installation in unused mounting slots.

- **Note:** Cabinets are equipped with both a left and right swing frame for mounting distribution panels. Because of cable routing differences, two types of distribution panels (left or right side installation) are available. Before installing a distribution panel, make sure the panel type (left or right installation) is appropriate for the swing frame.

Use the following procedure to install a distribution panel in an unused mounting slot:

1. Use a 3/16-inch hex-key to remove the screws that secure the rear access cover to the cabinet ground spacer/riser as shown in [Figure 21](#).
2. Locate the cable entry/exit hole cover that corresponds to the side of the cabinet (left or right) that will receive the distribution panel.

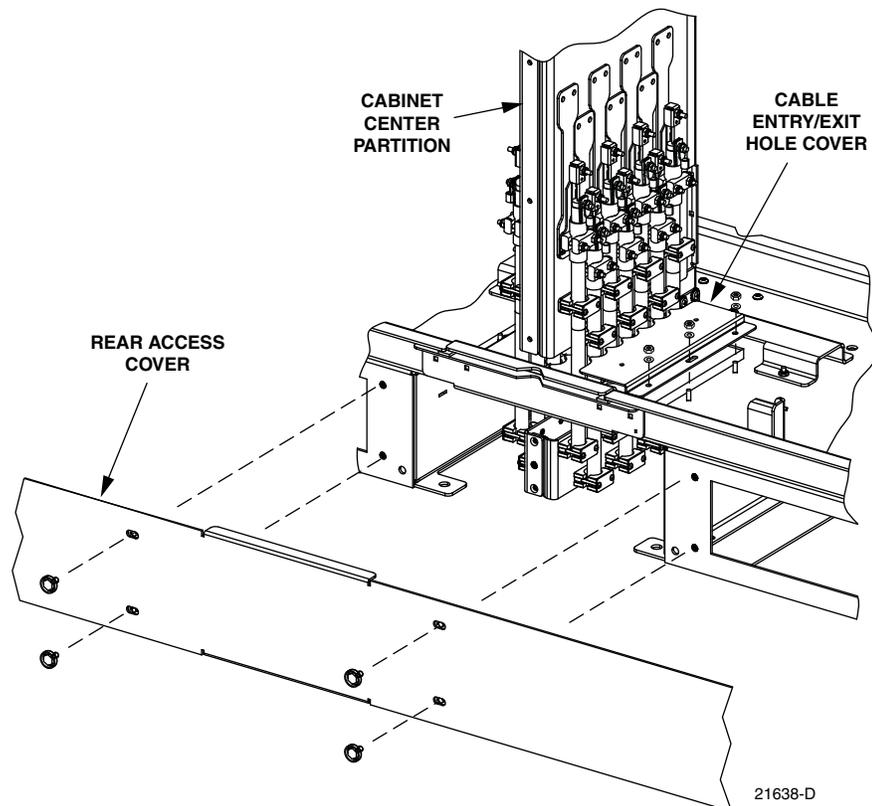


Figure 21. Cable Entry/Exit Hole Cover

3. Remove the nuts that secure the cable entry/exit hole cover (see [Figure 21](#)) to the bottom of the cabinet. Save nuts for reuse.
- **Note:** [Figure 21](#) shows how to remove the entry/exit hole cover for distribution cables 1–6. The entry/exit hole cover for distribution cables 7–12 is mounted on the opposite side of the cabinet center partition and may be removed using the same basic procedure.
4. Remove the cable entry/exit hole cover and attached flexible membrane from the bottom of the cabinet.
 5. Locate the cable clamping position specified for the next distribution cable as shown in [Figure 22](#).

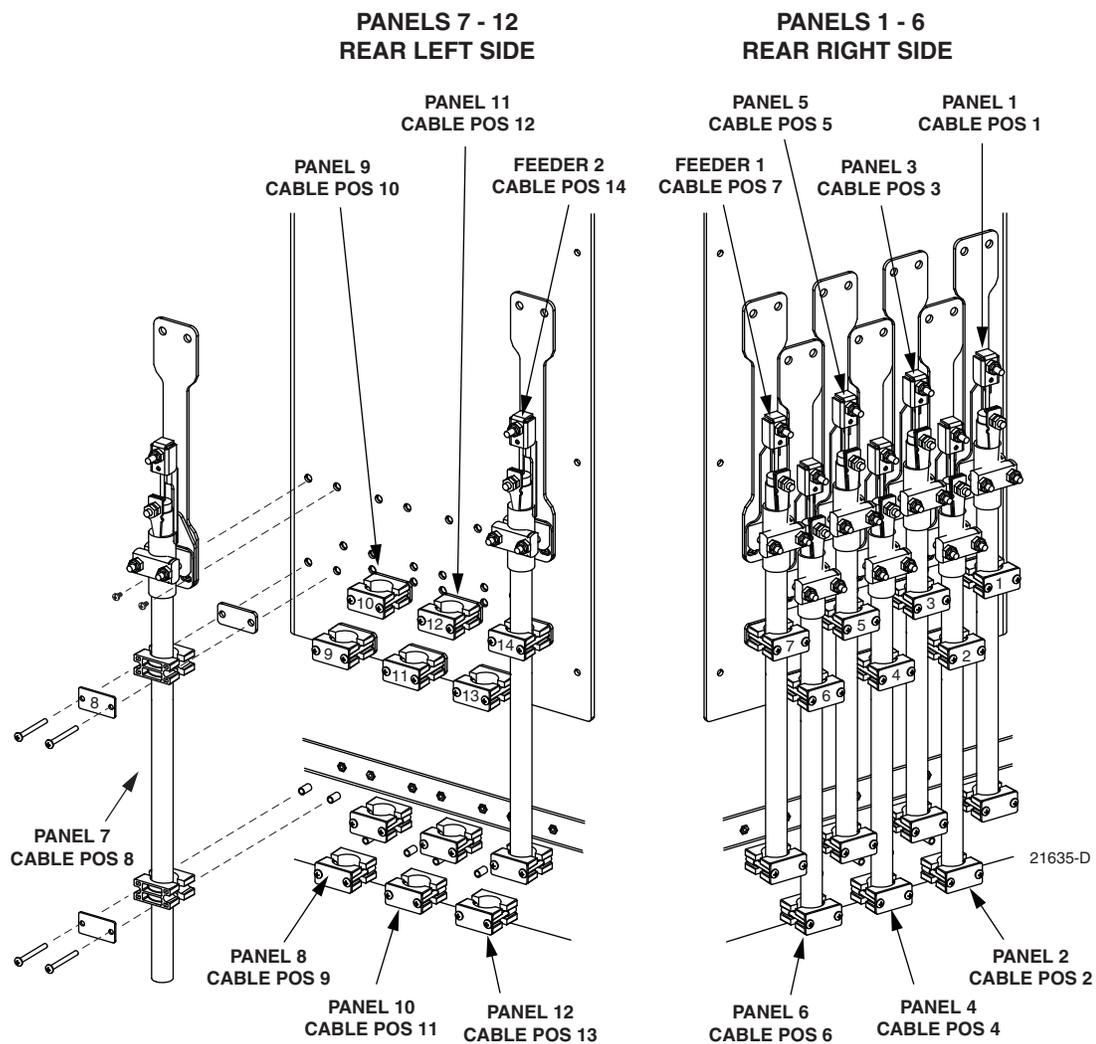


Figure 22. Secure Distribution Cable to Cabinet Center Partition

6. Remove the two cable clamp assemblies that correspond to the selected cable clamping position from the cabinet center partition.

7. Feed the distribution cable through the specified cable entry/exit hole and into the cable duct or mounting sleeve that is located beneath the cabinet. Pull all excess slack out of the cable.
8. Using the two screws provided, secure the cable clamp plate (attached to cable) to the cabinet center partition.
9. Assemble the two cable clamps (and grommets if required) on the cable as shown in [Figure 23](#).

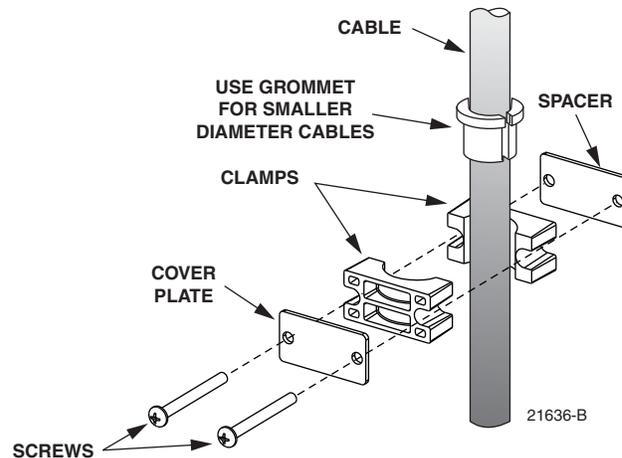


Figure 23. Cable Clamp Assembly

10. Using the two cable clamps, secure the cable to the cabinet center partition.
11. Reinstall the cable entry/exit hole cover removed in step 4.
12. If a grounding stud is provided on the cable, connect a #6 AWG jumper cable (provided with panel) between the cable grounding stud and the cabinet grounding block (see [Figure 7](#)). Tighten grounding stud nuts to 30 to 35 inch-lbs. (3.4 to 4.0 Nm) of torque.



Warning: *The grounding wires are connected to cabinet ground through a common copper grounding block. Failure to properly tighten the nut on each individual cable grounding stud could result in improper grounding of the cable and result in performance or safety issues.*

13. Open swing frame and insert the distribution panel into the selected mounting slot from the side as shown in [Figure 24](#). Use the three plastic push pins provided to secure the distribution panel to the rear side of the swing frame.

► **Note:** The push pins install in the corners of the panel and are used to hold the panel in place within the swing frame prior to installing the mounting screws. Each panel is V-shaped and one push pin is provided for each corner.

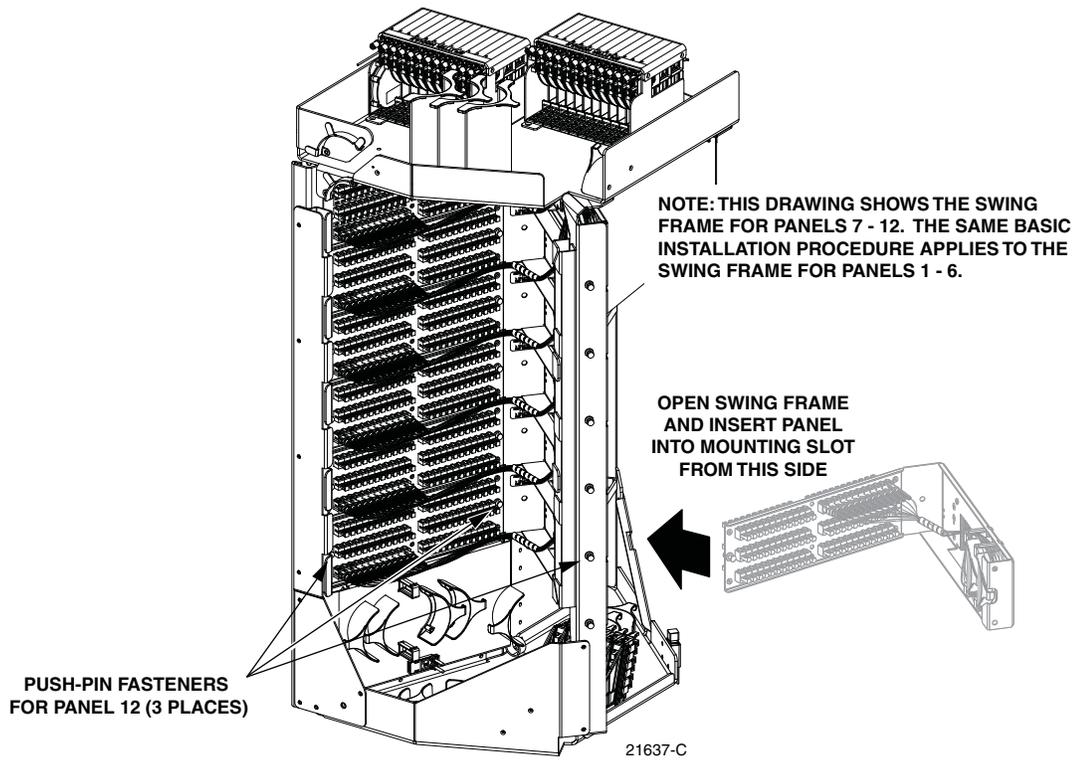


Figure 24. Inserting Distribution Panel into Swing Frame Mounting Slot - Typical

14. Working from the front of the swing frame, use the four screws provided to secure the front of the distribution panel to the swing frame as shown in [Figure 25](#).

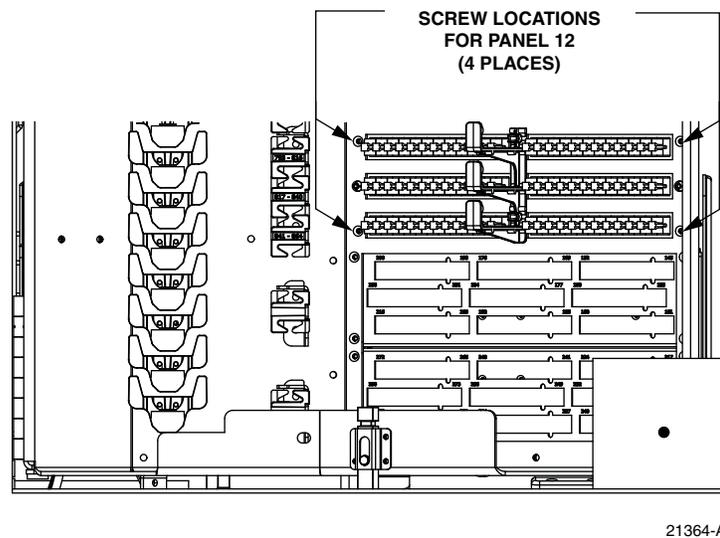


Figure 25. Secure Distribution Panel to Front Side of Swing Frame

15. Route and secure the distribution cable subunit fibers within the cabinet as shown in [Figure 26](#) and [Figure 27](#).

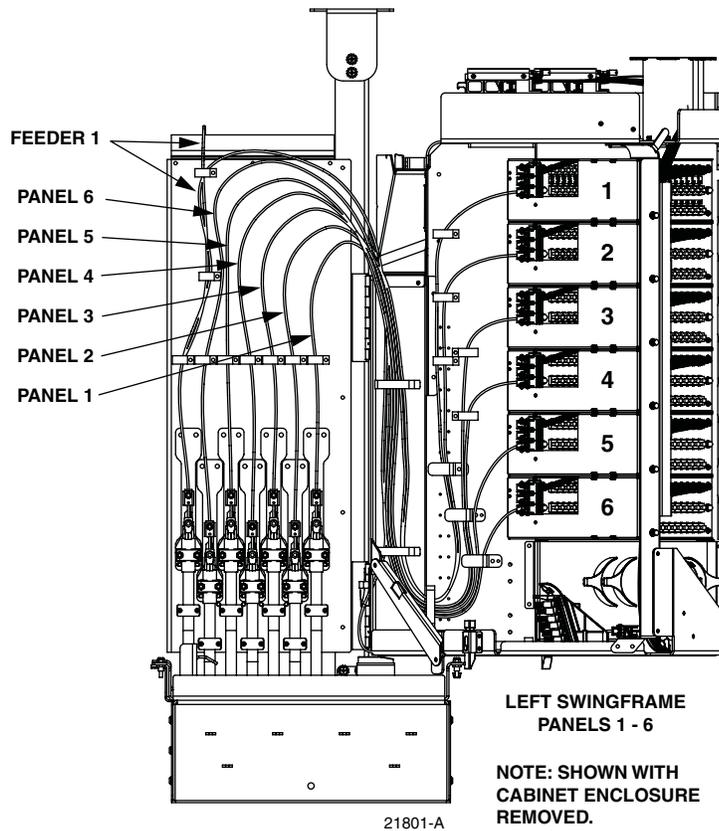


Figure 26. Route and Secure Distribution Cable Subunits - (Panels 1 – 6)

16. Slowly rotate the swing frame to the closed position while verifying that the subunit fibers do not kink or bind. Re-adjust the subunit fibers if necessary to prevent binding.
17. Reinstall the back access cover that was removed in step 1. Use the 3/16-inch hex-key to tighten the screws that secure the access cover to the cabinet ground spacer/riser.
18. If a grounding stud is provided on the cable, connect a #6 AWG jumper cable (provided with panel) to the cable grounding stud.

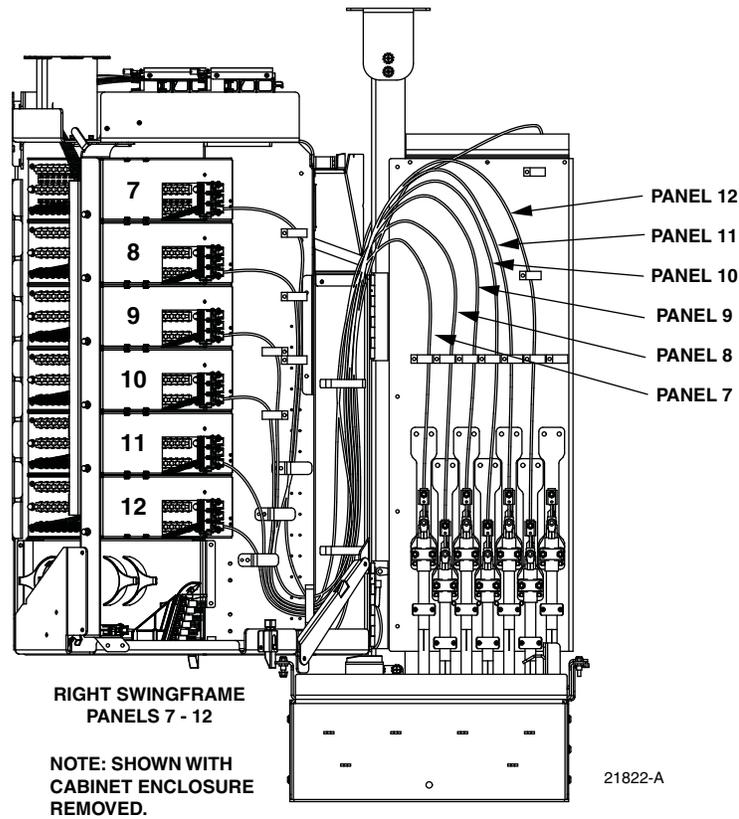


Figure 27. Route and Secure Distribution Cable Subunits - (Panels 7 – 12)

19. Locate the weather-seal strip attached to the right side of the cabinet grounding system as shown in [Figure 28](#).
 20. Push the free end of the #6 jumper cable through the hole in the weather-seal strip that corresponds to the cable position of the fiber optic cable.
- **Note:** The fiber optic cables are numbered 1–14 starting with the first cable on the right side of the center partition and continuing with the first cable on the left side of the center part ion (see [Figure 22](#)). The holes for the grounding cables are numbered 1–14 starting with the top opening in the weather-seal strip.

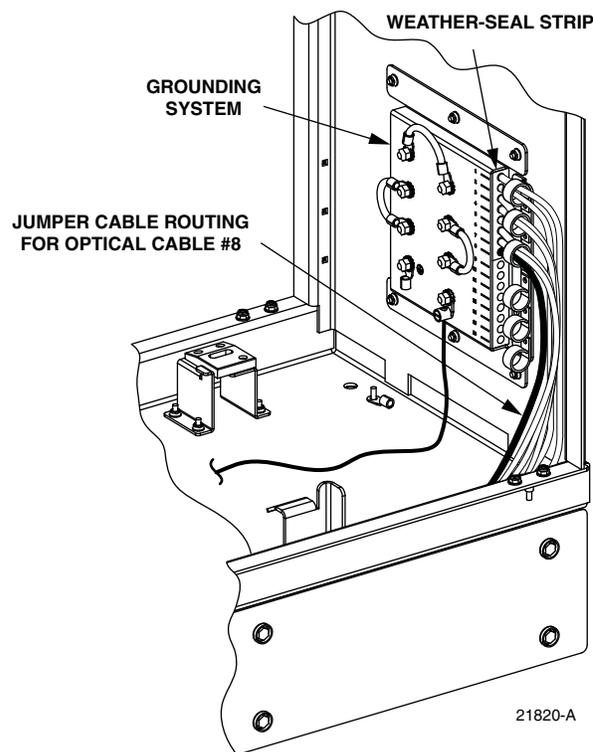


Figure 28. Cable Grounding System - Interior View

21. Open the grounding system access cover located on the rear side of the cabinet as shown in [Figure 29](#).
22. Identify the grounding stud that corresponds to the position of the fiber optic cable.
 - ▶ **Note:** A label is provided on the back of the access cover that indicates the grounding stud numbers.
23. Connect the grounding jumper cable to the grounding stud identified in step 22.
 - ▶ **Note:** Each grounding stud on the **left** bus bar is equipped with two nuts. When connecting a jumper cable to the **left** bus bar, place the cable terminal **between** the two nuts.
24. Tighten the grounding stud nut to 30 to 35 lbs force-inches (3.4 to 4.0 Nm) of torque.



Warning: *The grounding wires are connected to cabinet ground through a common copper grounding block. Failure to properly tighten the nut on each individual cable grounding stud could result in improper grounding of the cable and result in performance or safety issues.*

25. Close the cable grounding system access door and secure using the 216B tool.

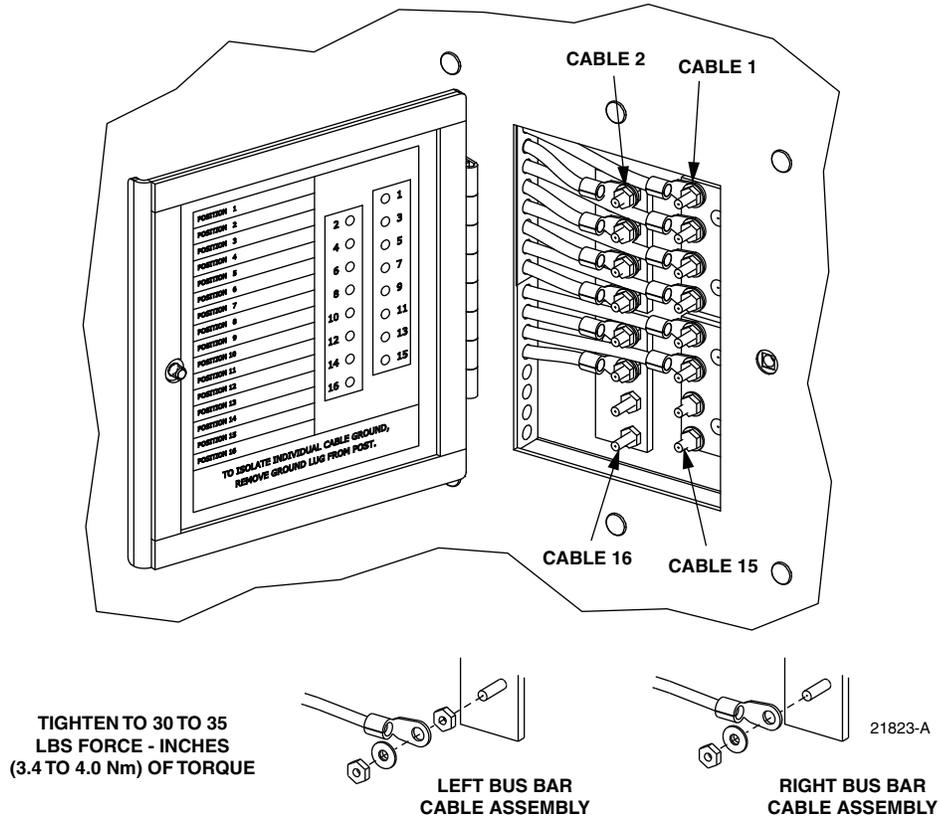


Figure 29. Cable Grounding System - Exterior View

8 ROUTING AND CONNECTING THE SPLITTER OUTPUT FIBERS

The splitter modules are mounted at the top of the 864 termination FDH 3000 cabinet. When a splitter module is initially installed, the output fibers are routed to the storage panel located at the bottom of the cabinet. At the storage panel, the output fibers are temporarily “parked” until they are needed. Service to a subscriber is enabled by removing an unused output fiber from the storage panel, routing it to the appropriate distribution panel, and then connecting it to the subscriber port.

8.1 Storing The Splitter Output Fibers

Use the following procedure to store the splitter output fibers.

1. Following installation of a splitter module, locate an open connector pack slot in the storage panel at the bottom of the cabinet.
2. Insert the connector pack into the unused slot in the storage panel. Refer to the FDH 3000 Plug and Play Splitter Installation Guide (ADCP-96-087) provided with splitter modules for additional information on installing connector packs in the storage panel.
3. Use the radius limiters to store any excess fiber slack. Refer to [Figure 30](#) for the routing guidelines.

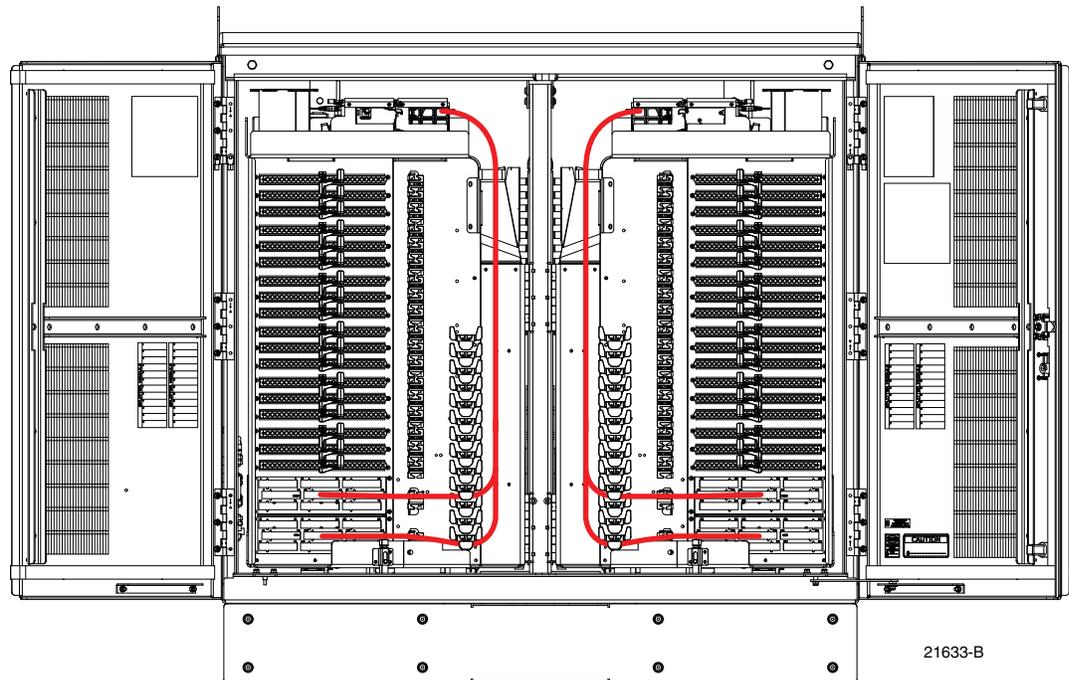


Figure 30. Routing Splitter Output Fibers for Storage

8.2 Enabling Service To a Subscriber

Use the following procedure to enable service to a subscriber:

1. Check the designation labels on the cabinet front doors to determine the distribution panel and port number that corresponds to the address of the subscriber.
2. Locate the subscriber port on the distribution panel and remove the adapter dust cap.
3. Select and remove an unused splitter output fiber from the storage panel and carefully work it free of any other fibers.



Warning: *Infrared radiation is invisible and can seriously damage the retina of the eye. Do not look into the ends of any optical fiber. Do not look directly into the optical adapters or connectors. Exposure to invisible laser radiation may result. An optical power meter should be used to verify active fibers. A protective cap or hood **MUST** be immediately placed over any radiating adapter or optical connector to avoid the potential of dangerous amounts of radiation exposure. This practice also prevents dirt particles from entering the adapter or connector.*

4. Remove the ferrule dust cap from the connector and then clean the connector as specified in the Optical Fiber Systems Cleaning and Mating Instructions (ADCP-90-159).
5. Connect the splitter output fiber connector to the subscriber port.
6. Use the radius limiters to store any excess fiber slack. When the splitter and the distribution port are located on the same side of the cabinet (same swing frame), refer to [Figure 31](#) for the routing guidelines. When the splitter and the distribution port on opposite sides of the cabinet (opposite swing frames), refer to [Figure 32](#) for the routing guidelines.

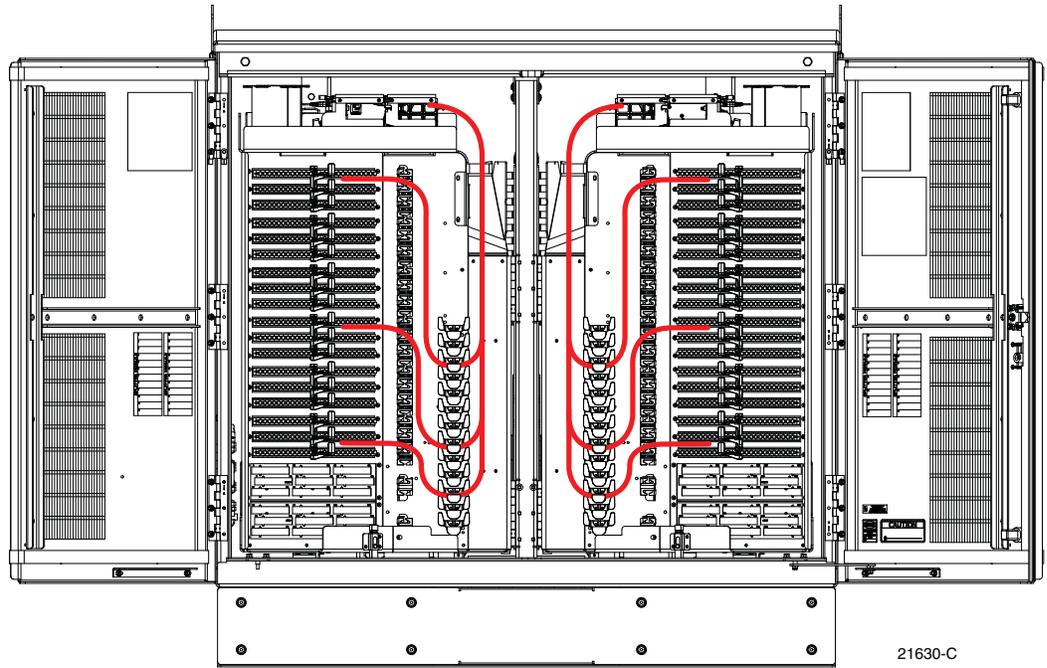


Figure 31. Routing Splitter Output Fibers - Splitter and Distribution Port on Same Side of Cabinet

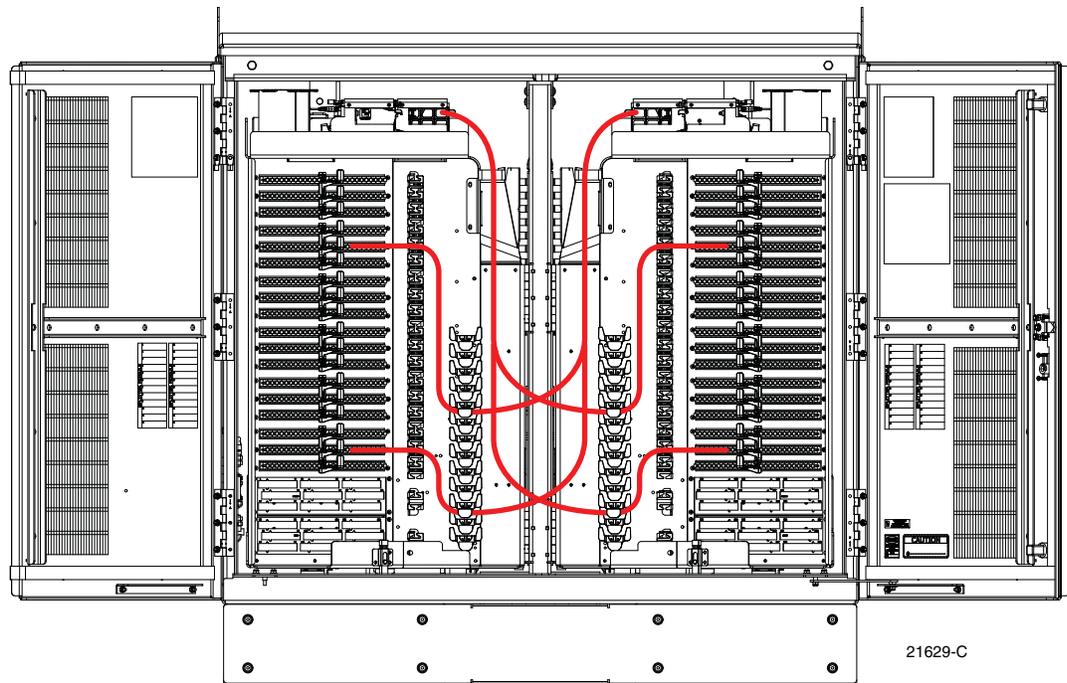


Figure 32. Routing Splitter Output Fibers - Splitter and Distribution Port on Opposite Sides of Cabinet

9 PASS-THROUGH ROUTING PROCEDURE

Pass-through routing is used when it is necessary for a feeder cable optical signal to be routed directly to a distribution port. This involves connecting a patch cord between the terminated feeder cable connector and the appropriate distribution port. Open cabinet doors and swing frames as needed to access the referenced components.

9.1 Splitter Compartment Pass-Through Routing Procedure

Use the following procedure to route a jumper patch cord between the splitter compartment and one of the distribution panels.

1. Locate an open splitter mounting position.
2. Remove the dust cap assembly from the selected splitter slot.
3. Remove the feeder cable connector(s) from the rear of the splitter compartment (see [Figure 19](#)).



Warning: *Infrared radiation is invisible and can seriously damage the retina of the eye. Do not look into the ends of any optical fiber. Do not look directly into the optical adapters or connectors. Exposure to invisible laser radiation may result. An optical power meter should be used to verify active fibers. A protective cap or hood MUST be immediately placed over any radiating adapter or optical connector to avoid the potential of dangerous amounts of radiation exposure. This practice also prevents dirt particles from entering the adapter or connector.*

4. Clean the feeder cable connector(s) as specified in the Optical Fiber Systems Cleaning and Mating Instructions (ADCP-90-159).
5. Reinstall the feeder cable connector(s) at the rear of the splitter compartment.
6. Obtain the optical patch cord (accessory) recommended for the pass-through connection.
7. Remove the ferrule dust cap from one of the patch cord connectors and then clean the connector as specified in the Optical Fiber Connector Wet and Dry Cleaning Instructions (ADCP-90-159) or by locally approved procedures.
8. Install the patch cord connector in the dust cap assembly as shown in [Figure 33](#).
- **Note:** Two patch cord connectors may be installed in the dust cap assembly if required.
9. Connect the patch cord connector(s) to the feeder cable connector(s) by inserting the dust cap assembly into the splitter slot as shown in [Figure 34](#).
10. Locate the distribution panel and the optical port to which the pass-through patch cord is to be connected.
11. Refer to the procedures in [Section 8.2](#) to route the pass-through patch cord to the distribution panel and to connect the patch cord connector to the appropriate optical port.

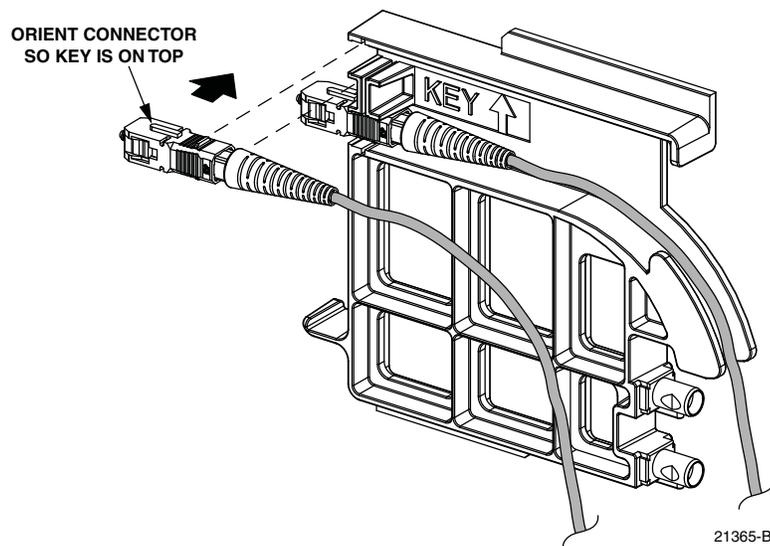


Figure 33. Installing Patch Cord Connector in Dust Cap Assembly

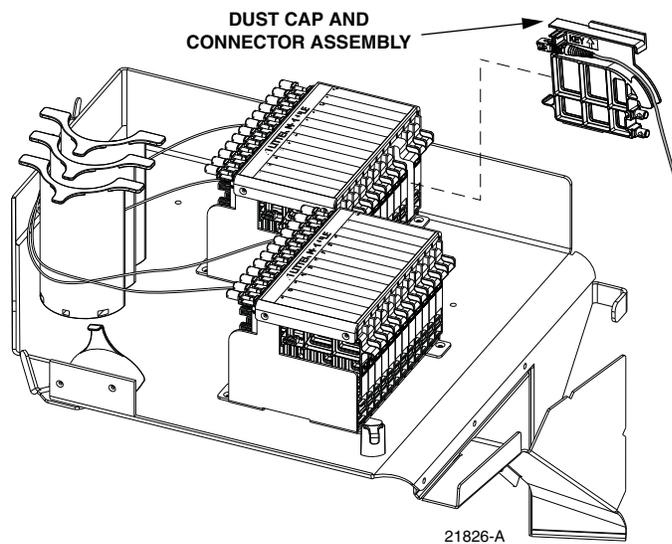


Figure 34. Inserting Dust Cap Assembly into Splitter Compartment

9.2 Sliding Adapter Pack Pass-Through Routing Procedure

Use the following procedure to route a jumper patch cord between the feeder cable sliding adapter pack and one of the distribution panels.

1. Locate the appropriate feeder cable connector on the sliding adapter pack.
2. Pull upward on the small tab on top of the adapter pack and lift the adapter pack to the position shown in [Figure 35](#).

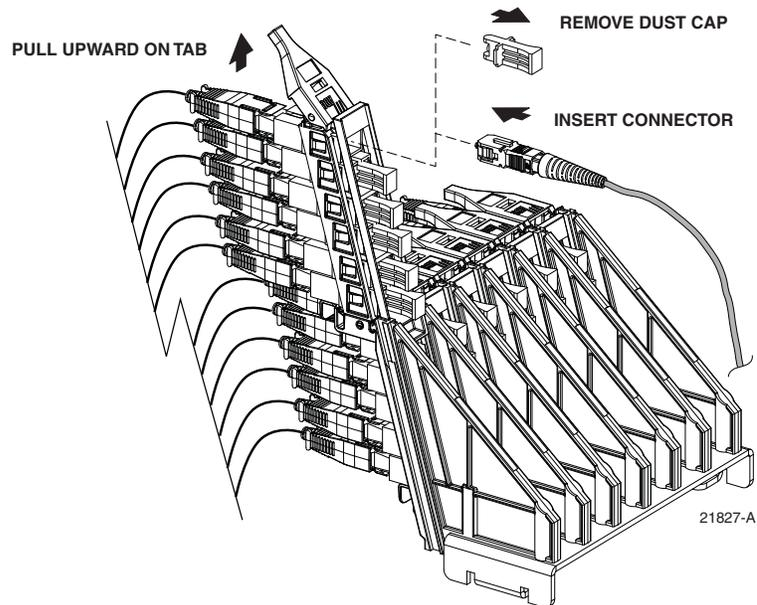


Figure 35. Adapter Pack Raised to Access Position



Warning: *Infrared radiation is invisible and can seriously damage the retina of the eye. Do not look into the ends of any optical fiber. Do not look directly into the optical adapters or connectors. Exposure to invisible laser radiation may result. An optical power meter should be used to verify active fibers. A protective cap or hood **MUST** be immediately placed over any radiating adapter or optical connector to avoid the potential of dangerous amounts of radiation exposure. This practice also prevents dirt particles from entering the adapter or connector.*

3. Remove the dust cap from the appropriate bulkhead adapter in the sliding adapter pack.
4. Obtain the optical patch cord (accessory) recommended for the pass-through connection.

► **Note:** Use catalog# FPCFW-SPSC-P-3.1 for UPC. Use catalog# FPCFW-APSC-P-3.1 for APC.

5. Remove the ferrule dust cap from one of the patch cord connectors and then clean the connector as specified in the Optical Fiber Connector Wet and Dry Cleaning Instructions (ADCP-90-159) or by locally approved procedures.
6. Insert the patch cord connector into the bulkhead adapter in the sliding adapter pack.
7. Slide the adapter pack down into the closed position.
8. Route the pass-through patch cord around the radius limiters and up the guideway to the top of the swing frame as shown in [Figure 36](#) (right swing frame) or [Figure 37](#) left swing frame.
9. From the top of the swing frame, route the patch cord to the front guideway that leads to the distribution panels.

10. Locate the distribution panel and the optical port to which the pass-through patch cord is to be connected.
11. Refer to the procedures in [Section 8.2](#) to route the pass-through patch cord to the distribution panel and to connect the patch cord connector to the appropriate optical port.

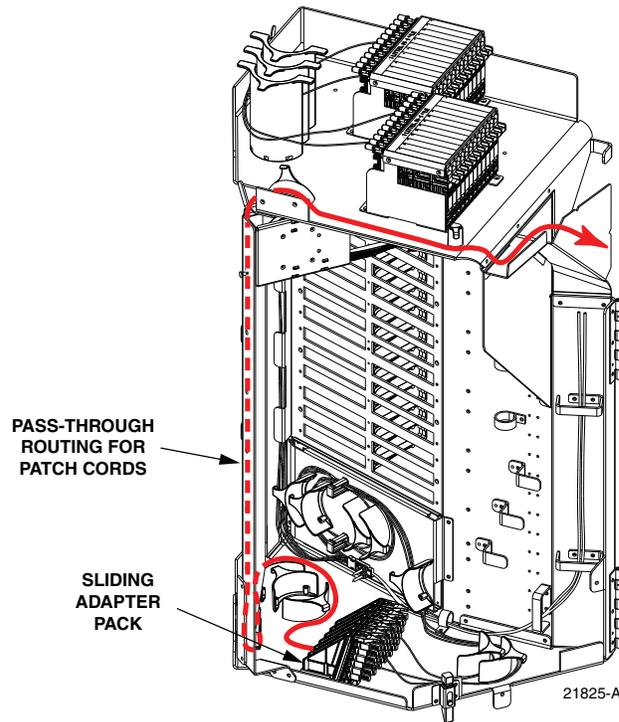


Figure 36. Routing Patch Cord Through Right Swing Frame

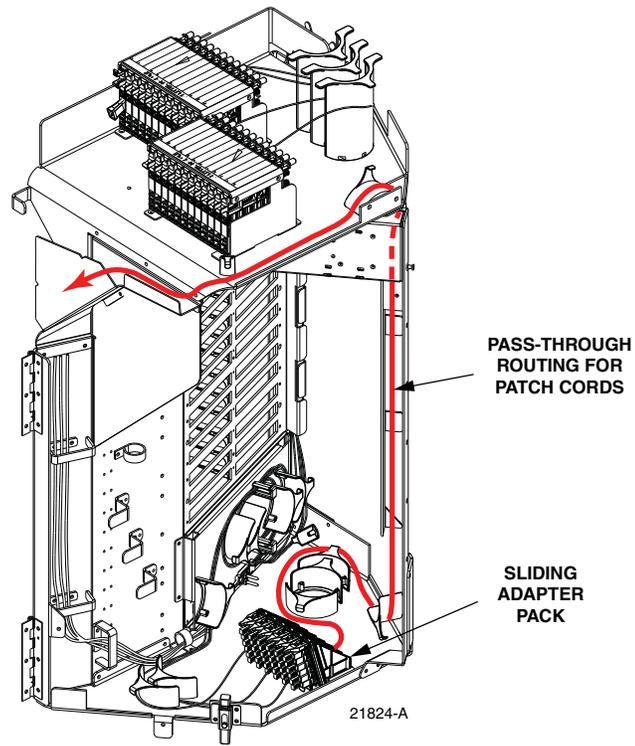


Figure 37. Routing Patch Cord Through Left Swing Frame

10 MAINTENANCE AND REPAIR PROCEDURES

The 864 termination FDH 3000 cabinet requires no regular maintenance to insure continuous and satisfactory operation. Maintenance is limited to repairing or replacing any cabinet components that may be damaged or broken in the course of normal operation. The following sections provide procedures for repairing or replacing common cabinet components. Open cabinet doors and swing frames as needed to access the referenced components.

10.1 Painting

Brush-in-cap type bottles of paint are available for touching-up nicks and scratches in the factory coat of paint. Lightly sand the area to be painted and then clean it thoroughly to remove any dirt, dust, or foreign matter. Shake the paint bottle until thoroughly mixed and then apply a light coat of paint to the damaged area using the small brush attached to the cap. Wait until the paint is dry and then apply a second coat if necessary. When finished painting, replace the paint bottle cap and tighten securely.

10.2 Distribution Panel Adapter Replacement

Replacement adapters are available for the distribution panels. Use the following procedure to remove and replace a damaged adapter:

1. Disconnect the splitter connector from the front side of the broken adapter as shown in [Figure 38](#) and install a dust cap on the connector.



Warning: *Infrared radiation is invisible and can seriously damage the retina of the eye. Do not look into the ends of any optical fiber. Do not look directly into the optical adapters or connectors. Exposure to invisible laser radiation may result. An optical power meter should be used to verify active fibers. A protective cap or hood MUST be immediately placed over any radiating adapter or optical connector to avoid the potential of dangerous amounts of radiation exposure. This practice also prevents dirt particles from entering the adapter or connector.*

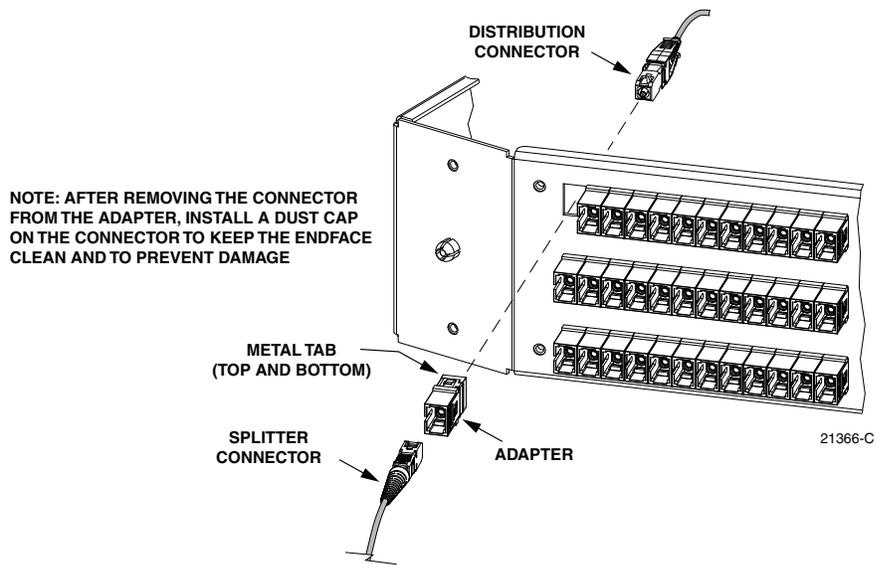


Figure 38. Adapter Removal and Replacement

2. Unlatch and fully open the cabinet swing frame to provide access to the rear side of the distribution panel.
3. Disconnect the distribution connector from the rear side of the broken adapter and install a dust cap on the connector.



Caution: Use extreme care when removing a connector or an adapter from the distribution panel to avoid macro bending the adjacent fibers.

4. Working from the rear side of the distribution panel, use the SC adapter removal tool (catalog # FCC-ACC003) to depress the two metal tabs that retain the adapter in the panel. Then push forward on the adapter until it pops out of the panel.
 5. Discard the damaged adapter.
 6. Install the replacement adapter by inserting it into the distribution panel from the front and then pushing it toward the back until it snaps into place.
- **Note:** Make sure the keyway in the replacement adapter is facing in the same direction as the keyways in the rest of the adapters installed in the distribution panel.
7. Clean the distribution and splitter fiber connectors as specified in the Optical Fiber Systems Cleaning and Mating Instructions (ADCP-90-159).
 8. Connect the distribution connector to the rear side of the replacement adapter.
 9. Close the cabinet swing frame.
 10. Connect the splitter connector to the front side of the replacement adapter.

10.3 Splitter Compartment Adapter Replacement

Replacement adapter assemblies are available for the splitter compartment. Use the following procedure to remove and replace a damaged adapter assembly:

1. Unlatch and fully open the cabinet swing frame to provide access to the both the front and rear side of the splitter compartment.
2. Remove the splitter or the dust cap assembly from the front side of the broken adapter assembly.



Warning: *Infrared radiation is invisible and can seriously damage the retina of the eye. Do not look into the ends of any optical fiber. Do not look directly into the optical adapters or connectors. Exposure to invisible laser radiation may result. An optical power meter should be used to verify active fibers. A protective cap or hood MUST be immediately placed over any radiating adapter or optical connector to avoid the potential of dangerous amounts of radiation exposure. This practice also prevents dirt particles from entering the adapter or connector.*

3. Remove the feeder cable connector(s) from the rear side of the broken adapter assembly as shown in [Figure 39](#) and install a dust cap on the connector(s).
4. Turn the thumb screw on the top of the broken adapter assembly clockwise until the adapter assembly detaches from the top of the splitter compartment.
5. Discard the damaged adapter assembly.

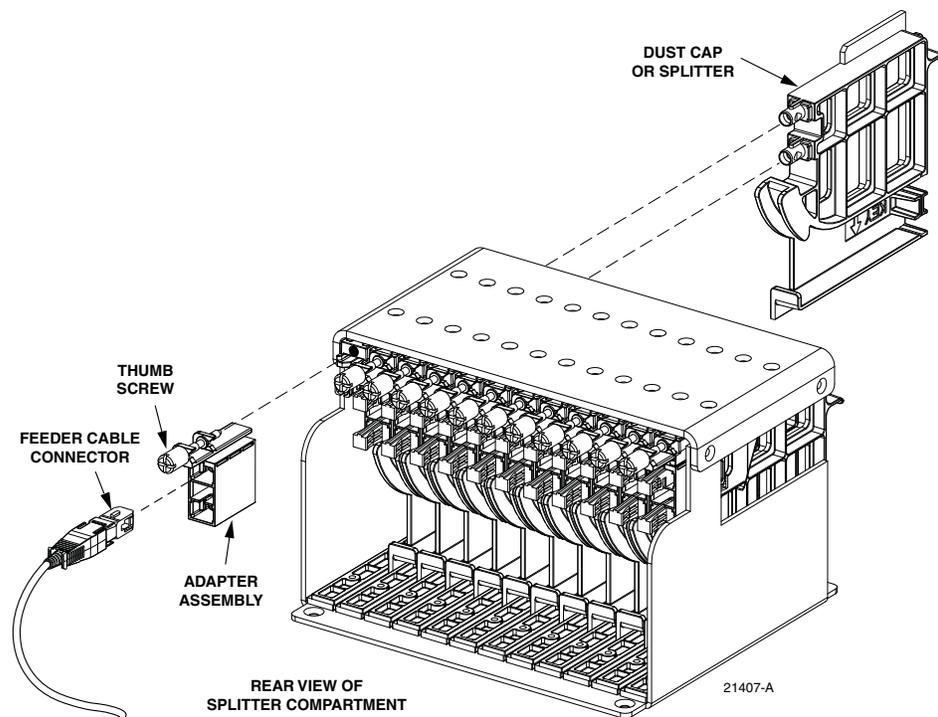


Figure 39. Splitter Compartment Adapter Replacement

6. Install the replacement adapter assembly in the splitter compartment and secure it by turning the thumbscrew counter-clockwise until tight.
7. Clean the feeder cable connector(s) as specified in the Optical Fiber Systems Cleaning and Mating Instructions (ADCP-90-159).
8. Connect the feeder cable connector to the rear side of the replacement adapter assembly.
9. Connect the dust cap or splitter to the front side of the replacement adapter assembly.
10. Close the cabinet swing frame.

10.4 Replacing a Damaged Fiber or Connector

A damaged fiber or connector can usually be replaced. The following describes the various replacement options.

- **Damaged Splitter Output Fiber:** Replace the splitter output fiber from the connector all the way back into the splitter. Splice a new pigtail (use only pigtails with bend-optimized fiber) to the remaining section of the old fiber within the splitter chassis. This procedure requires removing and disassembling the splitter to insert a splice chip and to perform the splice. A kit is available from ADC. Refer to ADCP-96-034 for the procedure.
- **Damaged Distribution or Feeder Connector:** Replace the connector at the bulkhead adapter if just the connector alone is damaged. Use a field-installable connector replacement kit. Refer to [Section 10.4.1](#) for the replacement procedures.

10.4.1 Splitter Output Fiber Connector Replacement

Use the following procedure to replace the connector:

1. Disconnect the damaged connector and the good connector from the adapter and install a dust cap on the good connector.



Warning: *Infrared radiation is invisible and can seriously damage the retina of the eye. Do not look into the ends of any optical fiber. Do not look directly into the optical adapters or connectors. Exposure to invisible laser radiation may result. An optical power meter should be used to verify active fibers. A protective cap or hood MUST be immediately placed over any radiating adapter or optical connector to avoid the potential of dangerous amounts of radiation exposure. This practice also prevents dirt particles from entering the adapter or connector.*

2. Replace the damaged connector as specified in the procedures provided with the field-installable connector replacement kit.
3. Clean both connectors as specified in the Optical Fiber Connector Wet and Dry Cleaning Instructions (ADCP-90-159) or by locally approved procedures.
4. Reconnect the good connector and the replacement connector to the adapter.

10.5 Door Gasket Replacement

Damaged door gaskets may be replaced using the door gasket kit which includes a roll of gasket material. The ideal installation temperature for the adhesive used on the replacement gaskets is between 60 and 100 °F (16 and 38 °C). Installation is not recommended if the temperature is below 50 °F (10 °C). Remove any damaged sections of gasket material from the door. If necessary, use a citrus based adhesive cleaner to remove any adhesive that may stay attached to the door. Cut replacement lengths of gasket material from the roll as needed. Remove the paper backing to expose the adhesive and then carefully apply the replacement gasket to the door. Take care not to leave any gaps between the meeting sections of the gasket strips.

10.6 Door Replacement

Damaged cabinet doors may be replaced using the door replacement kit. Use the following procedure to remove and replace the cabinet doors:

1. Open both cabinet doors and lock them in the open position as shown in [Figure 40](#).
2. Use a 3/8-inch nut driver to remove the two locking nuts that secure the grounding strap lug to the right door. Save nuts for reuse.
3. Use a 3/8-inch nut driver and wrench to remove the locking nut, brass bushing, and capscrew that secures the door linkage to the door bracket as shown in [Figure 41](#). Save the nut, bushing, and capscrew for reuse.
4. Use a 3/8-inch nut driver to remove the three locking nuts that secure each hinge to the door. Save nuts for reuse.

► **Note:** Support the door as the last nuts are removed to prevent the door from falling.

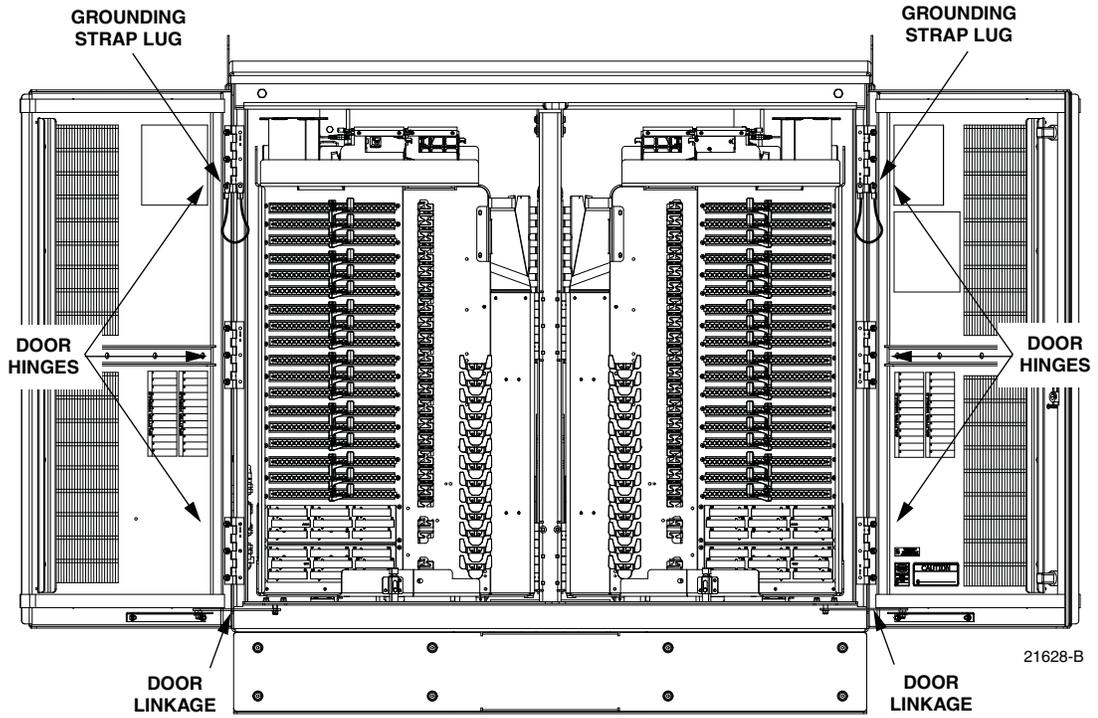


Figure 40. Door Replacement

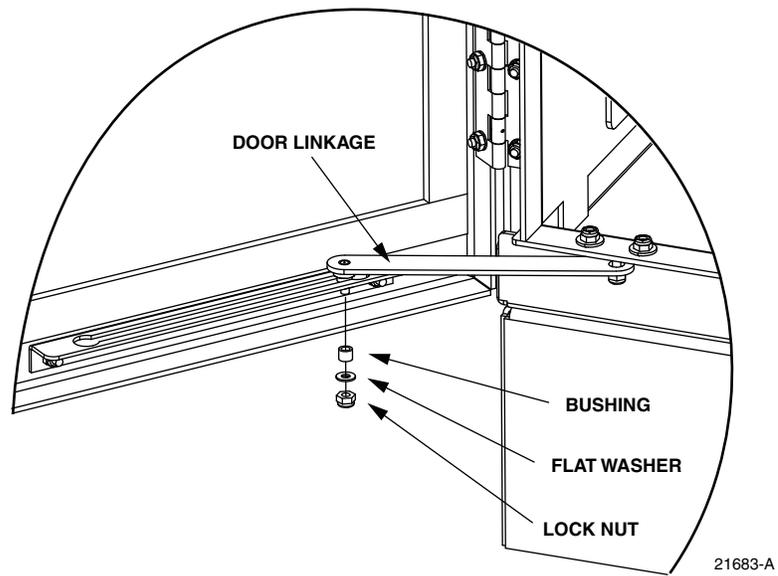


Figure 41. Door Linkage Hardware

5. Carefully lift the door away from the cabinet.
6. Transfer all designation information that may be recorded on the damaged door to the labels on the replacement door.
7. Place the replacement door in position for installation on the hinges.
8. Reinstall the three locking nuts (saved in step 4) that secure each hinge to the door.
9. Reinstall the locking nut, brass bushing, and capscrew (saved in step 3) that secures the door linkage to the door bracket.
10. Reinstall the two locking nuts (saved in step 2) that secure the grounding strap lug to the door.
11. Repeat process for the left door.
12. Close doors and check for proper operation.

10.7 Grounding System Terminal Access Procedure

Fiber optic cables with metallic strength members or shields are grounded to a common grounding system. The grounding system is designed to allow the metallic elements of each cable to be isolated for connection of cable locating equipment. The grounding system terminals may be accessed through a small cover located on the side of the cabinet. Use the following procedure to access and isolate the metallic elements of individual cables:

1. Locate the small hinged access cover on the side of the cabinet as shown in [Figure 42](#).
 2. Use the 216B tool to remove the screw that secures the access cover in the closed position.
 3. Open the cover and locate the grounding stud that corresponds to the cable to be located.
- **Note:** A designation label is provided on the access cover for identifying cables.
4. Remove the stud nut and disconnect the cable so that it is not touching the copper bus bar assembly.
 5. Attach cable detection equipment to the isolated grounding cable and complete the cable location procedure.
 6. When finished locating cables, reconnect the cable terminal to the grounding stud.
 7. Tighten the grounding stud nut to 30 to 35 lbs force-inches. (3.4 to 4.0 Nm) of torque.



Warning: *The grounding cables are connected to cabinet ground through the copper grounding blocks. Failure to properly tighten the nut on each individual cable grounding stud could result in improper grounding of the cable and result in performance or safety issues.*

8. Close and secure grounding block access cover.

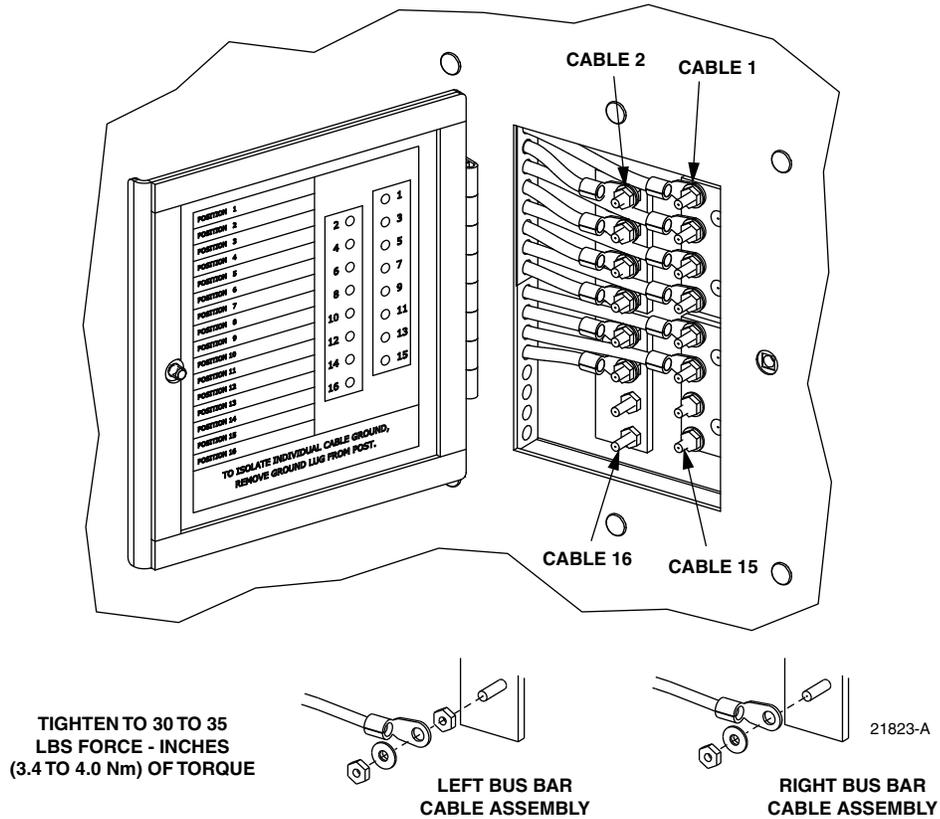


Figure 42. Grounding Block Access Cover

11 TECHNICAL ASSISTANCE

Contact the Technical Assistance Center (TAC) for technical question. Call 800.830.5056 or send an email to TAC.Americas@commscope.com.